



Instruction Manual

Wright Manufacturing
4600X Wedgewood Blvd
Frederick, Md 21703

Stander ZK serial # 75180 and higher



WARNING: READ THIS MANUAL BEFORE USING

For your safety and for proper operation and maintenance read carefully and keep readily available for future reference.

06/2014

Foreword

Welcome to the progressive group of mowing professionals who use Wright mowers. We are focused on giving you advanced engineering and quality construction in each mower we build.

This manual explains the features and promotes safer use of the mower. Please read it in its entirety and follow the instructions carefully so that you can have many years of safe and productive operation with your Wright product. *This manual may contain information pertaining to European models also. All information referencing “CE” only applies to European units.*

For service, remember that your Wright dealer knows your mower best and is interested in your satisfaction. Your dealer can provide you with quality maintenance and other assistance that you may need.

Please provide this manual to anyone who may operate the mower for them to study before operation. Additionally, make the manual and service documents available to anyone to whom you may sell the mower in the future. It is important that the next owner receive this information also.

As Wright Manufacturing, Inc. is constantly seeking ways to improve its products, the mower you have may differ slightly from the information and specifications in this manual. Wright reserves the option to make changes at any time without notice, in the process of continually improving our products.

Wright Manufacturing, Inc.



SAFETY ALERT

This is the safety alert symbol. It is used throughout this manual and on the mower’s safety labels to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death. Read these instructions carefully. It is essential that you read the instructions and safety precautions before you attempt to work on or use this unit.



WARNING

This symbol with the “WARNING” indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

This symbol with the word “CAUTION” indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

TABLE OF CONTENTS

PRE-DELIVERY SERVICE OF MOWER BY DEALER	5
1. INTRODUCTION.....	7
1.1 TECHNICAL DATA	7
1.2 GENERAL SAFETY RULES	8
1.2.1 DO'S AND DON'TS.....	8
1.2.2 WARNINGS	8
1.3 IMPORTANT INFORMATION	8
1.4 OWNER/USER NOTICE	9
1.5 SAFETY FOR OPERATION.....	9
1.6 USER QUALIFICATIONS	9
1.7 USER CLOTHING.....	9
1.8 INSPECT THE MOWER BEFORE EACH USE	9
1.9 REGULAR MOWER SAFETY	10
1.10 PREVENT FIRES.....	10
1.11 WORK ARE CONDITIONS AND INSPECTION.....	10
1.12 INITIAL OPERATING SAFETY GUIDELINES	10
1.13 SAFETY FOR MAINTENANCE.....	11
1.14 OPERATION IN FORWARD DIRECTION	11
1.15 OPERATION IN REVERSE	11
1.16 ZERO-RADIUS TURN OPERATION	12
1.17 OPERATING ON SLOPES	12
1.18 FUEL SAFETY	13
1.19 HYDRAULIC SAFETY	13
1.20 RESPONSIBLY HANDLING WASTE PRODUCT AND CHEMICALS.....	13
1.21 USING A SPARK ARRESTER.....	13
1.22 REPLACEMENT PARTS	13
2. WARNING, SAFETY AND INSTRUCTIONAL DECALS.....	14
3. SPECIFICATIONS	15
4. MACHINE DESCRIPTION AND OVERVIEW	17
4.1 OPERATOR'S AREA	18
4.2 MODEL & SERIAL LOCATION	18
4.3 CONTROL PANEL & STEERING CONTROL LEVERS.....	19
4.4 FUEL SYSTEM / FUEL SHUT-OFF VALVE.....	19
4.5 DIGITAL HOUR METER	19
4.6 DECK LIFT LEVER	20
4.7 SAFETY INTERLOCK SYSTEM	20
5. OPERATING INSTRUCTIONS	21
5.1 INSPECT MOWER BEFORE EACH USE.....	21
5.2 HOW TO START THE MOWER	21
5.3 HOW TO DRIVE THE MOWER	21
5.4 HOW TO STOP AND PARK THE MOWER	22
5.5 DRIVING THE MOWER OVER A CURB	22
5.5.1 NEVER DRIVE STRAIGHT ONTO OR OFF A CURB	23
5.6 MOWING OVER VARYING TERRAIN.....	23
5.7 HOW TO ADJUST NEUTRAL.....	23
5.8 CHANGING THE SPEED/SENSITIVITY ADJUSTMENT.....	23
5.9 HOW TO PERFORM TRACKING ADJUSTMENTS.....	24
5.10 HOW TO TEST/USE THE BLADE CLUTCH/BRAKE SYSTEM.....	24
5.11 HOW TO TEST THE OPERATOR PRESENCE CONTROL (OPC) SWITCH.....	25
6. SERVICE AND ADJUSTMENTS.....	26
6.1 TIRE MAINTENANCE AND PRESURE	26
6.2 HEIGHT OF CUT	26
6.2.1 DECK ADJUSTMENTS.....	26
6.3 FOOT PLATFORM.....	27
6.4 BELT TENSION ADJUSTMENT	27
6.4.1 REPLACING THE DRIVE BELT	27
6.4.2 REPLACING THE CUTTER DECK BELTS.....	28
6.5 HOW TO MOVE THE MOWER IF THE ENGINE WON'T START	28
6.6 HYDRAULIC SYSTEM.....	28
6.7 HYDRAULIC OIL RESIVORS CHECK/FILL.....	29
6.8 BLEEDING AIR FROM THE HYDRAULIC SYSTEM	29
6.10 FUEL EVAPORATION SYSTEM	29
6.11 CUTTING BLADES	30
6.12 SPINDLE PULLEY SPLIT HUB R&R	30

6.13 LOADING AND UNLOADING	30
6.14 TRANSPORTING	30
6.15 LUBRICATION	31
6.16 CLEANING THE MOWER.....	31
7. KAWASAKI ENGINE MANUAL/MAINTENANCE.....	31
8. ELECTRICAL SCHEMATIC	32
9. DECALS	34
CONSUMABLES LIST	35
MAINTENANCE INTERVAL CHART	36
MAINTENANCE RECORD	37
WRIGHT MFG POWER EQUIPMENT LIMITED WARRANTY.....	38
FEDERAL AND CALIFORNIA EMISSION CONTROL WARRANTY STATEMENT.....	39
CUT QUALITY AND MOWING TIPS.....	41

PRE-DELIVERY SERVICE OF MOWER BY DEALER



If you are not completely familiar with the Safety Instruction Manual read it now before proceeding with the Pre-Delivery Service of the mower. Only your authorized Wright dealer should perform the Pre-Delivery Service of the mower.

The Wright Stander ZK is shipped completely assembled and has been adjusted and tested at the factory. However, due to jostling during the shipping process and the delivery time lapse the following items need to be repeated again before starting the mower. After you have uncrated the mower, follow these procedures in the order indicated:

- Inspect the mower for any damage, unusual conditions or missing parts.
- Inspect the mower for all of its decals, especially the warning decals. There should be one blade warning decal on each side of the deck, the “shield missing” under the blade belt covers, and the dash decal.
- Check service, parts and recall bulletins to ensure unit does not need any updates.
- Check (and fill if necessary) engine oil level according to the engine manufacturer’s recommendation.
- Check (and fill if necessary) hydraulic fluid level. Use fully SYNTHETIC oil: Mobil-1 15W-50 (see Hydro Check/Fill section of this manual).
- Check rear tire pressure - 18 to 22 psi. is recommended. It should be even on both sides. Use the higher pressures for heavier operators. Front Casters are equipped with non-pneumatic tires and do not require any air. Lowering tire pressure will affect deck pitch. **Always check pitch any time tire pressure is set below recommended pressures.**
- Check the battery to see that the cables are tight and connected properly. The battery is 12 volts and is a maintenance-free battery. Only charge the battery if it will not start the mower properly.
- Check the cutter deck for proper adjustment. The deck should be approximately ¼” lower in the front than in the rear and the deck should be level side-to-side. If the deck is not adjusted properly, please adjust at this time. See Deck adjustments section of this manual for further instructions.
- Lubricate all moving parts (see Maintenance Items section of this manual).
- Add regular unleaded gasoline to fuel tank. Turn fuel valve, located on the right side of the engine by the fuel filter, to the “ON” position. (Use a minimum of 87 octane gasoline) *(You may use gasoline containing up to 10% ethanol and gasoline containing up to 5% of methanol.)*
- Check brake safety interlock.
 - Try starting the engine with the parking brake released. (Engine should not start. If engine starts, service the parking brake locking system)
 - With hand controls in the middle or neutral position, apply the parking brake.
- Start the engine according to the engine manufacturer’s recommendation. Let the engine run at low - mid RPM for several minutes to ensure the engine oil reaches all of the engine parts and gets the hydraulic fluid circulating through the pumps, etc.
 - Check if the parking brake locking system prevents the units from being driven while engaged. If not, service the parking brake locking system.
- Release the parking brake. Next, move the hand control levers, one at a time, to make the wheels move in forward and backward rotation.

- Before testing the blade clutch/brake operation, make sure the area is clear and there is nothing vulnerable to possible thrown objects from under the mower. No one should be near the mower deck or in its line of discharge at this or at any time. The discharge chute deflector should be in the down position.
- Move the engine throttle control to $\frac{3}{4}$ RPM speed setting.
- Turn on the blade clutch switch. Run blades for approximately one minute. Next, engage and disengage the blades a few times about 10 seconds apart. If the blades do not start and stop in a few seconds each time, service the blade brake system.
- With the blades on, disengage the OPC switch to test the Operator Presence Control switch (OPC). A time delay has been added to the OPC system. The engine should die and the blades should stop within 6-9 seconds after stepping off of the foot platform. If not, service the OPC system.
- Disengage the blades.
- Drive the mower around on a level parking lot. Be sure that the mower drives in a straight line when both hand controls are held to the full speed position which is up against the stationary control bar. If not, see further in this manual for information on tracking adjustment.
- As you drive the mower, listen for any unusual noises and test for irregular operation and adjust or service as necessary. Next, go over the safety information and operating procedures in this manual with the customer. ***Instruct the customer in proper operation and observe the customer during their initial operation on a level parking lot. Make sure the customer is familiar and comfortable with the basic operation and use of the mower.***
- **Dealer:**
 - ☐ Register the mower online within 14 days from the date of retail purchase.
(If unable to use the online registration process, contact your Distributor to register for you)
 - ☐ Registering the product indicates you have successfully completed the pre delivery service checklist.
 - ☐ The limited warranty is considered invalid unless the unit is registered and the above steps are taken.
 - ☐ Remember, the purchaser is both your customer and our customer and his/her satisfaction is very important. Thank you for supporting our products.
- **The mower is now ready for delivery to your customer**

1. Introduction



This mower is built to the highest standards in the industry. However, carelessness or operator error may result in serious bodily injury or death. Accident and hazard prevention are dependent upon the awareness, concern, wisdom, and proper training of the personnel involved in the operation, transport, maintenance, and storage of the equipment. Make sure every operator is properly trained and thoroughly familiar with all of the information in this manual before operating the equipment.

This machine is constructed only for mowing grass on lawns without obstacles such as stones, tree stumps etc. The machine can also be used for other tasks when equipped with special accessory attachments; Grass Gobbler, Rear Bagging System and JRCO attachments. All other types of uses are incorrect. The manufacturer's directions concerning operation, maintenance, and repairs must be carefully followed.

Lawn mowers and all power equipment can be potentially dangerous if used improperly. Safety requires good judgment, careful use in accordance with these instructions and common sense.

The machine must only be operated, maintained and repaired by persons familiar with the machine's special characteristics and who are also knowledgeable about the safety instructions. Use only approved repair parts to maintain.

Accident prevention regulations, other general safety regulations, occupational safety rules, and traffic regulations must be followed without fail.

Unauthorized modifications to the design of the machine will absolve the manufacturer from liability for any resulting personal injury or property damage.

This machine is not intended for use in extreme environments, as a tow vehicle, on steep slopes greater than 15 degrees or in an enclosed area without good ventilation.

1.1 Technical Data

Weight of overall machine	52" (132 cm) = 1039 lbs. (471 kg), 61" (155 cm) = 1121 lbs. (508 kg)
Machine dimensions	52" (132 cm) = 67" (170 cm) L X 53" *65.5" (135 cm *166 cm) W
* = Deflector down	61" (155 cm) = 69" (175 cm) L X 62" *74.5" (157 cm *189 cm) W
Speed	Fwd. 12.5 mph (20.1 km h), Rev. 5 mph (8 km h)
Power supply	12V DC

1.2 General Safety Rules

The Wright Stander ZK is designed with your safety in mind. It has the following safety systems with which you should be familiar:

- The warning decals on the mower including the instrument panel warning.
- The blade switch must be “off” before starting the engine.
- Your feet must be on the foot platform in order to engage the blades.
- If you remove your feet from the foot platform while the blades are running the engine will stop and the blades will brake in seconds.
- Letting go of the hand controls will stop the wheels instantly.
- Spring loaded chute deflector helps reduce trajectory of thrown objects.
- Belt/pulley covers on cutter deck.
- Anti-tip rollers are provided at the rear of the mower to minimize the possibility of tipping back and over on the operator.

1.2.1 Do's and Don'ts

Do's	Don'ts
Read the operators manual before attempting to operate this machine	Don't disable safety switches
Use all PPE's, eye protection, ear protection and safety shoes	Don't operate when lightening is seen
Ensure all safety switches are operational	Don't lift with a forklift
Keep all shields and covers in place	Don't change RPMs outside of operating limits
Clean flammable material from machine	Don't tow or push
Inspect fuel system and fuel lines for cracks, leaks and dryrott	Don't operate on slopes when wet
Inspect area to be mowed for hazards	Don't leave a running machine unattended
Only operate in daylight	Don't change the engines governor setting or overspeed the engine
Mow safe distances away from drop-offs and other hazards	Don't operate the machine wearing sandals, sneakers or any loose fitting clothes
Maintain a safe distance from people and pets	Don't back up without being aware of what is behind the machine
Follow daily and weekly maintenance checklists	Don't suddenly push in forward direction while machine is in a rearward motion
Observe traffic laws while driving machine from one location to another	Don't operate a poorly maintain machine
Thoroughly inspect the machine after striking a foreign object	Don't allow persons to operate this machine without reading the operator manuals
Turn off blades when not mowing	Don't put hands or feet under any part of the machine while it is running
Slow down before turning	Don't ever carry passengers
Stop engine before removing Grass Gobbler or cleaning under deck	Don't discharge material towards anyone
Use caution when loading or unloading the machine onto a truck or trailer	Don't operate the machine if you are sick, fatigued or under the influence of alcohol or drugs
Use caution when mowing around low hanging branches	Don't start in an inclosed area
Use caution when mowing on steep slopes	Don't mow over gravel, stones or hard objects

1.2.2 Warnings!

These warnings are provided to improve safety and should be carefully read before using or maintaining the machine.



WARNING

This symbol with the word “WARNING” indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

This symbol with the word “CAUTION” indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

1.3 Important Information

It is vital that these instructions are available to machine users. It is also important to retain with the machine if the machine is sold or transferred to another user.

1.4 Owner/User Notice



WARNING

The owner's/user's obligation is to instruct themselves and all potential users in the safe operation of this equipment and be sure they read and follow the instructions in this safety manual and other material provided by Wright Manufacturing, Inc. before using or allowing others to operate the equipment. Do not operate this unit unless you carefully read, understand and follow the assembly, installation, and safety instructions contained in this manual and the warning decals provided on the unit. Do not allow other persons to use this unit unless you make sure they carefully read, understand and follow these instructions. Never allow children to operate or play on the unit.

1.5 Safety for Operation



WARNING

The Stander ZK should only be used by fully trained operators to prevent the risk of injury to themselves or other personnel. The owner's/user's obligation is to instruct themselves and all potential users in the safe operation of this equipment and be sure they read and follow the instructions in this safety manual and other material provided by Wright Manufacturing, Inc. before using or allowing others to operate the equipment. **DO NOT** operate this unit unless you carefully read, understand and follow the operation and safety instructions contained in this manual and the warning decals provided on the unit. **DO NOT** allow other persons to use this unit unless you make sure they carefully read, understand and follow these instructions. Never allow children to operate or play on the unit.

1.6 User Qualifications



WARNING

This product is designed for use by physically fit, experienced, professional commercial mower operators who have a **minimum of 160 hours** of experience operating twelve horsepower and greater industrial mowers. Operators must be 18 years or older and weigh at least 120 pounds and no more than 350 pounds. They must have read and understood this manual. **DO NOT** allow children to operate the mower. Do not allow adults to operate the mower without proper instruction mentioned above. Never allow passengers on the mower. **DO NOT allow adults to operate the mower without proper instruction as mentioned above.**

1.7 User Clothing



WARNING

DO NOT operate the mower while wearing sandals, tennis shoes, sneakers, or shorts. Always wear long non-baggy pants. Wear high-top leather work boots with thick, textured tread, soft-rubber soled at all times. Hard or smooth soled shoes are too slippery for a good footing on mower platform. **NEVER** wear loose-fitting clothing or jacket pockets that can get caught to the handlebars or control levers of any mower you drive. Wearing safety glasses, ear protection and safety shoes is advisable and required by some local ordinances and insurance regulations.

1.8 Inspect the Mower Before Each Use



WARNING

DO NOT use the mower if any parts are not maintained in good operating condition. Examine the moving parts prior to each use. Look for excessive wear, bald or worn tires, cracks in parts, loose or missing bolts, cotter, linchpin or "hair" pins or cable yoke pins and replace before operating the mower. Make sure all safety equipment provided with the mower is in good operating order, including all the warning decals and the required operator-presence device which stops the engine and blades when the foot-operated Operator Presence Control (OPC) switch is released. (To test the OPC, follow instructions in the Operating Instructions section of this manual.) Inspect the two anti-tip rollers and their respective bolts at the rear of the mower for tightness and proper operation. Be sure that all parts of the hand-operated transmission control system are tight and secure. This is to reduce the possibility that the mower could have a loss of control or safety.

1.9 Regular Mower Safety



WARNING

Keep your Wright mower in good operating condition, and keep safety devices and shields in place and in working condition. Replace worn tire(s) with less than 3/32" of any tread groove left. Use tires with the tread pattern specified by Wright Mfg., Inc. only. **DO NOT** change the engine governor settings or over-rev the engine contrary to engine manufacturer specifications. Failure to comply can compromise operator safety, shorten equipment life and void your manufacturer's warranty. Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition. Check the blade mounting bolts for proper tightness every eight (8) hours of operation. Check the blades for excessive wear and sharpness every four to eight (4-8) hours of operation. Sharpen dull blades. Replace blades when they become excessively worn. The mower **should not be used** after the blades or other part of the mower strikes a foreign object, until conducting a thorough inspection and any damage is repaired. Make sure the chute deflector is always in place and operating properly. Replace if the deflector becomes worn or ceases to properly deflect the grass in a safe manner. See the instructions in the [Recommended Maintenance](#) section of this manual for other items of required maintenance.

1.10 Prevent Fires



WARNING

Machine fires and structural fires can occur if a machine is stored before allowing it to cool, if debris is not removed from critical areas of the machine, or if the machine is stored near combustible materials.

- Remove grass and debris completely from engine compartment and muffler area, and from on top of the mower deck, before and after operating machine, especially after mowing or mulching in dry conditions.
- Always shut off fuel when storing or transporting.
- Do not store Stander near an open flame or source of ignition, such as a water heater or furnace.
- Check fuel lines, tank, cap and fittings frequently for cracks or leaks. Replace immediately if necessary.

1.11 Work Area Conditions and Inspection



WARNING

Prior to operating the unit, carefully inspect all lawn/ground areas where you plan to use the mower for hidden, hard-to-see objects or uneven ground that may be hidden in the grass. Clear the work area of moveable objects such as wires, rocks, glass, etc. that might be picked up by the mower and dangerously thrown. Remove, if possible, or mark the location of all immovable objects or irregular areas and be sure not to hit them with any part of the mower, its deck or the blades. Obstacles such as holes, abrupt changes in ground contour, tree trunks, stumps or roots, pipes protruding from the ground, paving edges, etc. in the path of operation can abruptly turn or stop the mower. This could throw you off the mower or into and possibly over the handle bars causing serious injury or death. ***The faster you are moving, the more potential there is for injury.*** Mow only in daylight or in good artificial light. Keep away from drop-offs, the edges of ponds, streams, pools, etc. especially at the bottom of slopes. Do not mow when children or others are around. When the Wright mower is in use, never direct the grass discharge toward bystanders, traffic, cars or buildings nor allow anyone within 50 feet of the machine while in operation. Thrown objects can pass through glass windows and some walls of buildings. There is extreme risk of danger from thrown objects or being cut by the blades of the mower or being run over if you lose control. Never operate the mower in an enclosed area without good, approved ventilation. Exhaust fumes are dangerous.

1.12 Initial Operating Safety Guidelines



WARNING

- Read and understand the warnings on the instrument panel of the mower.
- Keep a firm hold on the stationary handle at all times.
- Keep both feet on the foot platform at all times.
- Know the controls and how to stop quickly.
- Before attempting to start the engine, follow all starting instructions below and in the engine operator's manual.
- Look behind before backing up.

- Before leaving the operator's position, even momentarily, turn off the blade clutch engagement switch and apply the parking brake. Keep others from coming near the mower. Get back on the mower as soon as possible.
- When leaving the Wright mower unattended, turn off the blade clutch engagement switch, apply the parking brake, stop the engine and remove the key. Never leave the machine unattended on a slope in case someone disengages the parking brake which would be hazardous if the mower were to roll.
- When transporting, driving onto transport vehicles, into buildings, across parking lots or otherwise not mowing grass, turn off the blade clutch engagement switch to reduce risk of thrown objects and rotating blade hazard. After coming to a stop apply the parking brake, stop the engine and remove the key.
- Before performing any maintenance or repair service, disengage power to blades, apply the parking brake, stop the engine, remove ignition key and spark plug wire from spark plug(s).
- All operators of this mower should exercise caution when driving this mower at high speeds. Sudden stops from excessive speeds may cause serious injury.
- DO NOT allow inexperienced people to operate the mower until they have read and understood these safety instructions. **Operate the mower at slower speeds while becoming familiar with it.**
- The grass discharge chute deflector must be installed at all times and in the down position except that it may be raised when the grass catcher is completely installed or a mulch kit is completely installed.
- If the mower discharge clogs, turn off the blade clutch switch, apply the parking brake, stop the engine and remove the key before removing obstruction.
- Keep all shields and covers in place, especially grass discharge chute deflector and the blade belt covers.
- Keep hands, feet and clothing away from rotating parts, especially the rear wheels, blades, engine flywheel, belts and pulleys.
- Do not touch engine or muffler while engine is running or soon after it is stopped. These areas can be so hot as to cause severe burns.
- **Clean grass, leaves and lubricant spills from surfaces after use to prevent fire hazard.**
- Be alert for traffic when crossing roads or operating near roadways.
- Before climbing curbs, crossing gravel drives, sidewalks or roads, turn off the blades and wait for them to stop, then place the deck into transport position.

1.13 Safety for Maintenance



WARNING

- Repairs carried out by untrained or unauthorized personnel may result in personal injury or serious malfunction of the Stander ZK.
- If Guarding is removed for inspection and component replacement, ensure the parking brake is applied and key is removed prior to inspecting or making repairs and that the guarding is replaced before operation.

1.14 Operation in Forward Direction



WARNING

Always keep a firm grip on the mower stationary handlebar with both hands. Operate the mower slowly until you become familiar with how the mower operates. Do not operate the mower faster than conditions allow. For example, hills, wet or bumpy ground, dim light or high grass are all conditions requiring slower speeds. Never operate the mower at the highest speed unless you are on level, wide, open areas of clearly visible ground or transporting on paved areas. Speeding with any mower is dangerous, and so is traveling faster than conditions should permit on this mower. Sudden stops from excessive speed or falling off the mower may cause serious injury or death.

1.15 Operation in Reverse



WARNING

Always keep a firm grip on the mower stationary handlebar with both hands. Keep both feet firmly on the foot platform. Look behind you before backing to prevent injuring yourself or anyone behind you. Operate the mower very slowly, inching it backward until you become familiar with how the mower operates. Always operate slowly if in an awkward location or position. While backing up, never place your foot or feet on the ground near the back edge of the mower to prevent serious personal injury if the mower were to run over you.

1.16 Zero-Radius Turn Operation



WARNING

During zero-radius turns (when one mower wheel rotates backwards while the other rotates forward) drive extra slowly to reduce the possibility of losing traction, or control, or becoming dizzy. This will help prevent you from being thrown off the mower. Be aware that if you do a turn on a slope you may go through all of the orientations to a slope mentioned below and must handle the mower accordingly.

1.17 Operation on Slopes



WARNING

DO NOT operate on steep slopes. Do not operate the mower on slopes steeper than you can feel secure about the traction of the tires and the stability of the mower. Do not operate the mower on slopes at all when the grass is wet. There is a danger of suddenly sliding sideways or down the hill. When operating on a slope, travel across the grade whenever possible, not in an up or down pattern. Reduce speed and exercise extreme caution on slopes and in sharp turns to prevent tipping or loss of control. Be especially cautious when changing direction on slopes.

When pointing up a slope, your mower has the most weight on the drive wheels and therefore the most traction at the tires. However, this is the angle that it has the most tendency to tip back (“pop a wheelie.”) This is the preferred angle for mowing small areas of steeper slopes.

Recommendations for this angle:

- Lean as far forward as possible to add your weight to the front of the mower.
- Accelerate gently. Do not accelerate quickly to avoid “popping a wheelie”.
- If backing down the hill, do not stop suddenly but slow down gradually.

When pointing down a slope, your mower has the least weight on the rear drive wheels and therefore the least traction at the tires. This is the angle that the mower has the most tendency to slide. However, this is the angle that it has the least tendency to tip back. Avoid this angle, as it has the least advantage for your mower.

Recommendations for this angle:

- Lean back with arms stretched out straight while holding onto the stationary handlebar. This transfers more of your body weight to the rear drive wheels for more traction.
- Do not change speed suddenly to minimize the tendency of going into a slide. Accelerate and decelerate gently. If you ever go into an uncontrolled slide while pointing down a slope the recommended procedure is to let go of the handles and jump off if necessary. Otherwise, control the mower gently and stay off slopes that tend to make the wheels slide.

When crossing a slope sideways, your mower has the average amount of weight on the drive wheels versus the front wheels, similar to level ground. However, this angle leaves the least weight on the higher side drive wheel, tending to make it slip. This is the preferred angle for mowing large areas of gentle slopes.

Recommendations for this angle:

- Stand straight, but lean sideways, toward the uphill side and stand on the uphill side of the foot platform. This adds weight to the higher side drive wheel and will allow you to mow more quickly across the slope without sliding.
- To reduce the chances of “popping-a-wheelie”, do not accelerate quickly.


Note: Excessively worn tire tread is dangerous. Replace tire(s) with less than 3/32” of any tread groove left. Use tires with the tread pattern recommended by Wright Mfg., Inc. only. Keep the tire pressure in the drive tires between 18 and 22 psi. Higher pressures will cause the tires to have less traction which may prevent safe operation.

1.18 Fuel Safety



WARNING

Handle gasoline with care – it is highly flammable. Do not smoke while handling gasoline. Use an approved gasoline container. Never remove the fuel cap or add gasoline to a running or hot engine or an engine that has not been allowed to cool for several minutes after running. Never fill the tank indoors and always clean up spilled gas. NEVER store the equipment with gasoline in the tank inside a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.

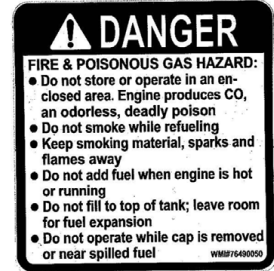

1.19 Hydraulic Safety



WARNING

Keep body and hands away from pin holes or fittings that eject hydraulic fluid under high pressure. Use paper or cardboard and not hands to search for leaks. Hydraulic fluid escaping under high pressure may have sufficient force to penetrate skin and cause serious injury. If foreign fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this form of injury or gangrene may result. Seek medical attention immediately. Make sure all hydraulic fluid connections are tight and all hydraulic hoses and lines are in good condition before starting your Wright mower. Hydraulic fluid is under high pressure. If you need service on your hydraulic system, please see your authorized Wright dealer.

1.20 Responsibly Handling Waste Product and Chemicals



Waste products, such as used oil, fuel, coolant, brake fluid and batteries, can harm the environment and people:

- Do Not use beverage containers for waste fluids – someone may drink from them.
- See your local Recycling Center or authorized dealer to learn how to recycle or get rid of waste products.

1.21 Using a Spark Arrester

The engine in this machine is not equipped with a spark arrester muffler. It is in violation of California Public Resources Code Section 4442 to use or operate the engine on or near any forest-covered, brush-covered, or grass covered land unless the exhaust system is equipped with a spark arrester meeting any applicable local or state laws. Other states or federal area may have similar laws.

1.22 Replacement Parts

Use of parts other than specified parts supplied by Wright Manufacturing, Inc. may compromise the safe use of the mower, are not recommended and their use could void the warranty. Always check with your Dealer or the Wright Mfg website for the latest Illustrated Parts List for your equipment.



WARNING

CALIFORNIA Proposition 65 Warning

The engine exhaust from this product contains chemicals known to the state of California to cause cancer, birth defects or other reproductive harm.

Wright is fully concerned with your safety. Please read the above again and again until you fully understand the methods to promote the safest operation possible.

**REMEMBER – YOUR MOWER CAN BE ONLY AS SAFE AS THE OPERATOR.
FAILURE TO FOLLOW SAFE OPERATING PRACTICES MAY RESULT IN
SERIOUS INJURY OR DEATH.**

2 Warning, Safety and Instructional Decals

- Specific safety warning decals are located on the equipment near immediate areas of potential hazards.
- Keep all safety signs legible. Remove all grease, dirt and debris from safety signs and instructional decals.
- Replace worn, damaged or missing safety decals.
- If an attachment or accessory has been installed, make sure current safety decals are visible.
 1. Blade engage/disengage switch
 2. Ignition switch, Off
 3. Ignition switch, Run
 4. Ignition switch, Start
 5. Apply parking brake to start




76490013 DECAL, MAIN INST PANEL



76490031 DECAL, THROTTLE INSTRUCTIONS



76460001
DECAL, DANGER BLADE
HAZARD

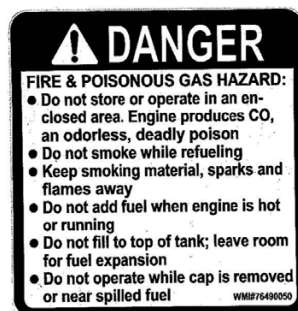















76490050
DECAL, FIRE HAZARD
WARNING

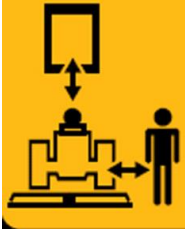

76490001
DECAL, SHIELD MISSING



76490053 DECAL, PARKING
BRAKE

			Warning, denotes potential hazardous situation which, if not avoided, could result in minor to serious injury or death
	Warning, rotating blades. Keep hands, feet and clothing away from rotating blades. Use safety glasses to avoid thrown material. To inspect blades or clean under side of cutter deck, apply parking brake and remove ignition key.		Caution, rotating pulleys and belts. Keep shields and covers in place while machine is in operation. Keep hands feet and clothing away from rotating pulleys and belts.
	Warning, crush hazard. Be aware of your surroundings at all times. Always stop the machine if someone enters the area.		Caution, Battery hazard. Avoid skin contact with battery acid. Do not allow open flame near the battery when charging. Always wear eye protection when checking the battery.
	Warning, shield missing, DO NOT operate with shields missing. Keep shields and covers in place.		Caution, hot surface! Avoid skin contact with hot surface
			Warning, potential fire, clean flammable material away from machine. Clean engine fins and exhaust heat shield of any debris build up. Inspect fuel lines for wear and replace when worn. Always clean up spilled fuel and oil.
			Caution, hydraulic fluid under pressure, potential skin puncture. Do not check for leaks with mower running.
			Caution, denotes potential hazardous impeller condition when using the rear bagging system, could result in cutting of fingers or hand while machine is in operation. Keep all shields and covers in place.
			Warning, thrown objects. Never operate the mower deck with the chute deflector damaged, altered, removed or in the raised position, except when using a Grass Gobbler, rear collection system or mulching system is being used.
			Warning, rollover. DO NOT operate near drop-offs, retaining walls, drainage ditches, water and other types of hazards to avoid a wheel dropping over the edge or to avoid the ground from breaking away.
			Warning, reduce speed and exercise extreme caution on slopes and on sharp turns to prevent tipping or loss of control

3 Specifications

Engine

- See your engine owner's manual
- RPM: Full speed 3600 +/- 50 RPM (no load) / Idle: 1550 RPM

Electrical System

- Charging System: Internal stator coil
- Battery Type: Maintenance free
- Battery Voltage: 12 Volts
- Fuses: Two, 20 amp blade type

Fuel System

- Capacity: 17.5 gal, (66.2 L)
- Type of Fuel: Unleaded regular gasoline, minimum 85 octane. Do not use gasoline containing more than 10% ethanol. Do not mix oil with gasoline.
- Fuel Filter: In line
- Fuel shut off: Three way valve.

Safety Interlock System

- PTO switch must be disengaged, brake engaged and the control handles in the neutral and locked position to start the engine.
- Operator must have feet on the platform to engage the PTO and brake off or engine will stop.

Drive System

- Two Hydro Gear 16cc w/fans variable displacement piston pumps
- Two Hydro Gear 15cu in. HGM-H series hydraulic motor.

Hydro Oil System

- Hydro Oil: fully SYNTHETIC motor oil: Mobil-1 15W-50
- Hydro Filter: 2ea. Spin-on, 25 micron, no bypass / PN 34490002
- Total Capacity: 2.10 qts per side
- Tank Fill Level: Fill up to "Fill Cold" level. Do not over fill.

52" (132cm) ZK	
Width, deflector down	65.5" (166cm)
Width, deflector up	53" (135cm)
Length	67" (170 cm)
Height	47.5" (121cm)
Weight	1039 lbs (471 kg)
61" (155cm) ZK	
Width, deflector down	74.5" (189cm)
Width, deflector up	62" (157cm)
Length	69 (175 cm)
Height	47.5" (121cm)
Weight	1121 (508 kg)

<i>Torque Specifications</i>		
Critical Application	Thread Locker	Torque Range ft-lbs (N-m)
Wheel motor bolts / nuts (Securing motor to support)	N/A	103-125 (139-169)
Engine mounting bolts	Loctite 2760	48-62 (65-84)
Clutch to engine shaft	Loctite 2760	48-62 (65-84)
Wheel hub to wheel motor	N/A	160-240 (216-325)
Wheel lug nuts	N/A	70-90 (95-122)
Split Hub (Spindle & Drive) (Gr 8)	N/A	13-17 (17-23)
Blade Bolts	N/A	70-80 (94-108)
Caster yoke nut	N/A	32-44 (44-59)

4 Machine Description & Overview

The Wright Stander ZK is meant to solely cut, bag or mulch grass. The use for any other purpose is not recommended. Do not disconnect any safety switches or remove any decals.

- | | | |
|-----------------------------|-----------------------|--------------------|
| 1. Flexible Chute Deflector | 2. Battery Box | 3. Drive Tires |
| 4. Fuel Tanks | 5. HOC Handle | 6. Control Handles |
| 7. Stationary Handle Bar | 8. Brake Handle | 9. Engine |
| 10. Muffler & Heat Shield | 11. Bucket | 12. Deck Covers |
| 13. Aero-Core Cutter Deck | 14. Anti-Scalp Wheels | 15. Caster Tires |



4.1 Operator's Area

1. Foot Platform
2. Anti-Tip Wheels
3. Height Select Pin
4. Brake Handle
5. Dash/Control Panel
6. Motion Control Handles
7. Stationary Handle Bar
8. Deck Lift Handle
9. Upright Pad



4.2 Model & Serial Location

- 1 - The plate is affixed to the left side of the tractor body below the HOC decal.
- 2 - Stated on the plate will be the Model, date of assembly and serial number, these will be needed when ordering parts.



4.3 Control Panel & Steering Control Levers


The Stander ZK speed and direction are controlled by using the control handles. Moving the control handles equal distance forward or backward the machine moves in a straight line. By releasing the control handles during operation, the controls will return to the neutral position and the machine will stop.

1. Left Forward Motion Control Handle
2. Left Reverse Motion Control Handle
3. Right Reverse Motion Control Handle
4. Right Forward Motion Control Handle
5. Stationary Handlebar
6. Throttle
7. Choke
8. Digital Hour Meter
9. PTO Switch
10. Ignition Switch



4.4 Fuel System / Fuel Shut-Off Valve

The fuel shut-off valve is located behind the hinged upright pad. The valve should be in the “Off” position at all times when the mower is not in use. Do Not fill the tanks completely. Fill level is 1” below the bottom of the fill neck. This will allow for the gas to expand. A fuel gauge is located on the left tank.

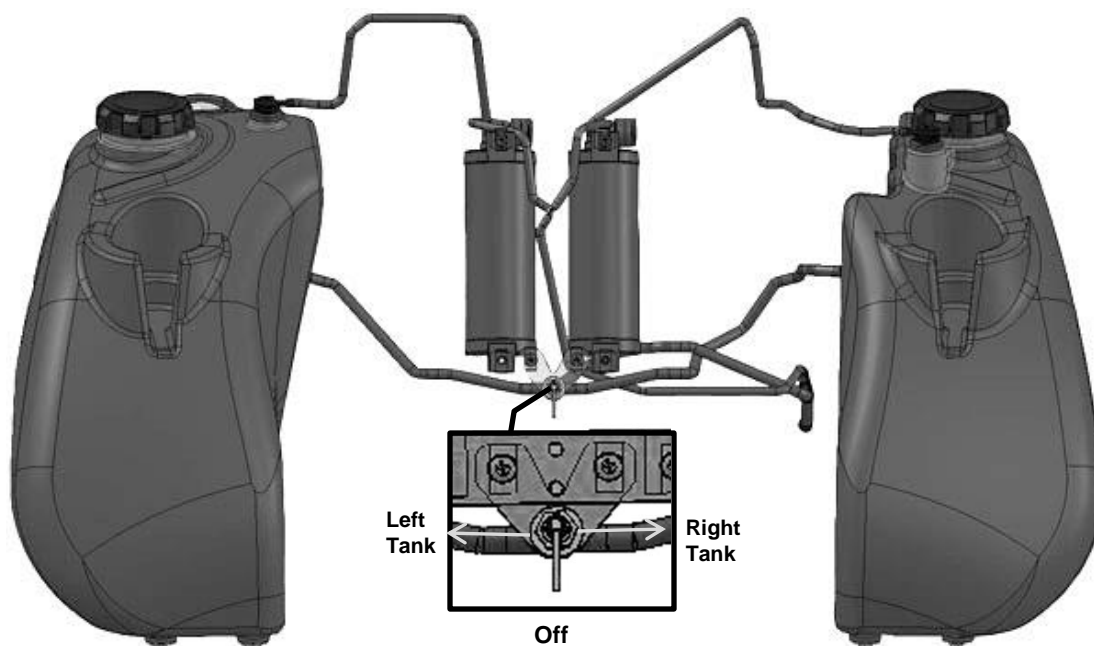

4.5 Digital Hour Meter

The Stander ZK is equipped with a digital hour meter. Refer to operating/reset instructions below.

The programming specified is:

Default display: Hours

Press once (TMR1): Timer 1, press for 3 sec to reset

Press twice (TMR2): Timer 2, press for 3 sec to reset


Press three times (svc ENG): Will display time remaining until next service point, hold down to reset. The first interval is 8hr, thereafter 100hr. Beginning 5hr before service point the meter will flash “svc ENG, in [remaining hours]” every 5 sec.

Shut off engine: Will display how many times the engine has started.



4.6 Deck Lift Lever

The “Quick Cut” height selector will adjust the cut height in $\frac{1}{4}$ ” increments. To operate, ensure the cutter deck is in the full up and locked position, insert detent pin (A) in the desired cut height hole (B), grab deck lift handle (C), with thumb, push down on button (D) and lower to the selected cut height.

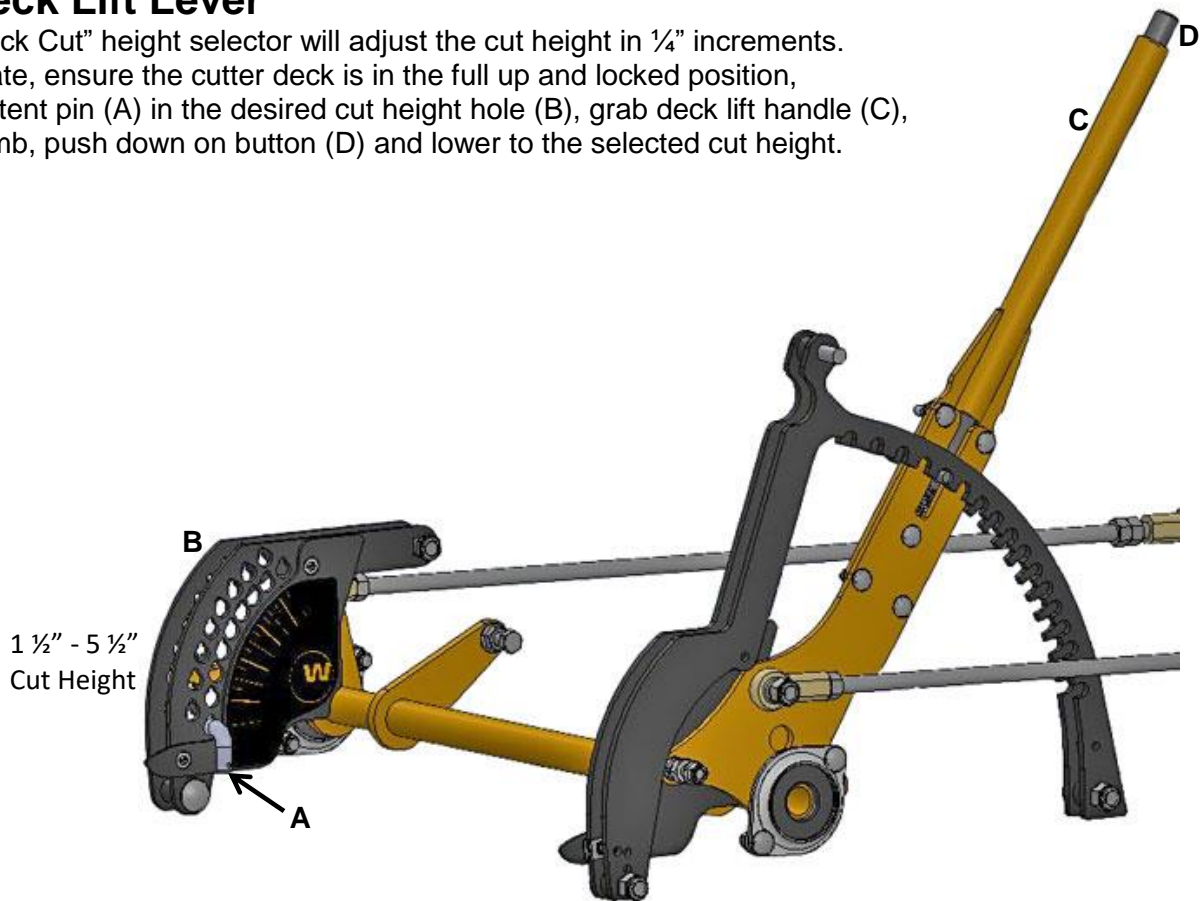

4.7 Safety Interlock System

The Wright Stander ZK is equipped with a safety interlock system. The PTO must be disengaged, brake applied and control levers in the neutral position in order to start the machine. With the brake applied, the controls are locked in the neutral position.



5. Operating Instructions



If you are not completely familiar with the Safety Instruction Manual read it now before proceeding with the operation of the mower. **REMEMBER THERE ARE CERTAIN PRECAUTIONS LISTED IN THIS MANUAL THAT YOU MUST NOW TAKE BEFORE STARTING THE MOWER.**

5.1 Inspect Mower Before Each Use

Inspection of Mower: Do not use the mower if any parts are not maintained in good operating condition. Examine all moving parts prior to each use. Look for excessive wear, bald drive tires or worn out front tires (normally smooth), cracks in parts, loose or missing bolts, cotter, linchpin or “hair” pins or cable yoke pins and replace before operating the mower. Make sure all safety equipment provided with the mower is in good operating order, including all warning decals and the operator-presence device which stops the engine and blades when the foot-operated Operator Presence Control (OPC) switch is released. To test the OPC, follow the instructions given later in this manual. Inspect the two anti-tip rollers and their respective bolts at the rear of the mower for tightness and proper operation. Ensure that all parts of the Quad-Lever™ control system are tight and secure. This is to reduce the possibility that the mower could have a loss of control or safety.

Basic Operation: The following procedures are to guide you through the basic operation of the mower.

You should be a qualified mower operator according to the safety section of this manual. If this is your first time, operation should only be done with the assistance of your dealer on a level area.

You should go through each step, in the order indicated, every time you start the mower.

5.2 How to Start the Mower

Before starting the engine

- Make sure the control levers are in the exact neutral position
- Apply the parking brake if it is not already set.
- Turn OFF the blade engaging switch if it is on.
- Turn fuel valve to the “ON” position.

Starting the engine

Electric Start:

- Start the engine according to the engine manufacturer's recommendation, see engine manual. Set the throttle control lever near mid throttle, pull out on the choke control knob and turn the key to the start position. Do not engage the starter for more than ten (10) seconds at a time. This may overheat the starter and the wiring systems. Wait ten (10) seconds between attempts. If the engine does not start after several attempts or stalls frequently, take the mower in for service.

After starting the engine according to the engine manufacturer's recommendation, push in on the choke control knob to open the choke valve, let the engine run for several minutes to get the hydraulic fluid circulating through the pumps, etc. and to allow the engine to warm up. Do not over-rev a cold engine.

Unusual noises or irregular operation:

As the engine is warming, listen for any unusual noises and test for irregular operation and adjust or service as necessary.

5.3 How to Drive the Mower

While standing, both feet should be firmly placed on the foot platform. Set the engine speed about a fourth of the way from idle. Release the parking brake. Now try moving the hand control levers, one at a time, very slightly, forward and backward. Check to see if the wheels move forward and backward according to the position of the levers. If not, check to see that the pump release valves are closed. With both feet still firmly placed on the foot platform, increase the engine speed to about half of the way from idle speed. The higher engine speed will make the controls much more responsive and the mower much quicker; **Use caution if it is your first time.** Now try moving the hand control levers, one at a time, very slightly, forward and backward. Gradually increase your speed until you are well acquainted with the

operation of the hand controls and the mower's behavior. After gaining a good feel for how the mower handles, gradually attempt higher engine speeds until familiar with operation at full throttle engine speed.

Unusual noises or irregular operation:

As you drive the mower, listen for any unusual noises and test for irregular operation and adjust or service as necessary.

5.4 How to Stop and Park the Mower

Come to a complete stop. If the blades are on, turn them off using the switch on the instrument panel.

Make sure the control levers are in the exact neutral position. Set the parking brake, reduce the engine speed to idle, shut off the ignition switch to stop the engine and then remove the key from the ignition switch. The mower is now parked. Do not leave mower unattended on a sloped surface.



Brake ON



Brake OFF

5.5 Driving the Mower Over a Curb



WARNING

To climb a curb, first see the Safety Instruction Manual section of this manual, especially the parts on:

- Initial Operating Safety Guidelines
- Operation In Reverse
- Operation In Forward Direction

It is recommended to use ramps for curbs 5" and higher. Using ramps, you can easily back on and off without damaging your mower or the curb.

Curbs 5" and lower, raise the mower deck into the highest position. Then drive the mower in reverse at a 45 degree angle to the curb (with the left side of the mower closest to the curb) until you are within an inch or two of the left-rear tire hitting the curb. Stop and then gradually bump into the curb with that tire until it is just on top of the curb. If the tire slips even while lurching the mower into the curb, then the curb is too high and you should use ramps or find another way. The mower should still be at a 45 degree angle to the curb. Now, while maintaining the same angle to the curb, continue to back up until the right-rear tire is close to the curb. Using the same technique lurch the right tire onto the curb. After both wheels are on top of the curb, turn the mower counterclockwise and back up so the left caster wheel comes over and last should be the right caster wheel as the mower is twisting to the left (counterclockwise). The technique works the best if you try not to drive backwards at a near 90 degree angle to the curb but get all of the wheels to go over while the mower is moving at least a 45 degree angle to the curb. To drive off a curb, first try driving up onto it to make sure the curb is not too high. If the curb is not too high, drive the right-front caster off first while driving toward the curb at a 45 degree angle (the curb should be to your right). Then, maintain that 45 degree angle so the left caster goes over, then the right-rear wheel, then the left rear wheel. Do NOT step off the mower during ANY maneuver.

5.5.1 Never Drive Straight Onto or Off a Curb



Never drive straight onto or off a curb. If you do the whole procedure at a very sharp angle it will tend to minimize the contact of the mower deck with the curb and you will be able to more safely control the mower.


5.6 Mowing on Varying Terrain

See the Safety Instruction Manual section of this manual, especially the parts on:

- Initial Operating Safety Guidelines
- Operation On Slopes
- Operation In Reverse
- Operation In Forward Direction
- Operation During Zero-Radius Turns

5.7 How to Adjust Neutral


Neutral refers to the mower movement when the engine is set to full throttle, parking brake is off, and the control levers are in the neutral position. The mower should not move forward or backward during this time. If the mower is moving forward or rearward, the neutral setting must be adjusted. The hydraulic pump has a Return-to-Neutral (RTN) device built into the linkage of the pump. Before adjusting neutral, it is necessary to lift the rear drive wheels off the ground using a jack and stands. To make the adjustment, loosen the 1/4" Allen bolt **(A)**(this requires a modified 1/4" Allen) and rotate the RTN device on the pump corresponding to the wheel that needs adjustment. If the right wheel turns in the neutral position, then the right pump RTN needs to be adjusted. The RTN mechanism should be rotated until the neutral position is found and then retighten the 1/4" Allen bolt. Use care not to over tighten the Allen bolt. Repeat the procedure on the other pump if necessary.

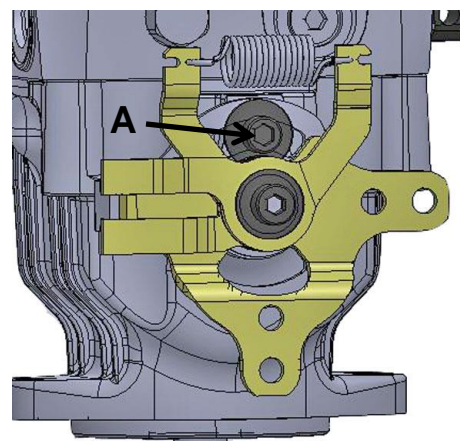

5.8 Changing the Speed/Sensitivity Adjustment

The controls are initially set with the Speed/Sensitivity Adjustment in the faster, more sensitive position. If an operator is not completely familiar with the mower operation the operator may desire to decrease the ground speed.

The slower setting has a corresponding decrease in the sensitivity of the controls. In other words, a given amount of movement of the control levers will cause about a 25-30% change in the ground speed making the controls less sensitive. After **stopping the engine**, the adjustment is made by removing rod ends from the current holes in the control system torsion bar and reinstalling them into the alternate holes. The holes closest to the operator position are the faster, more sensitive setting and the holes farthest from the operators position are for the slower, less sensitive setting. You must then perform the Tracking Adjustment described below. No adjustments are needed to the front control rods.

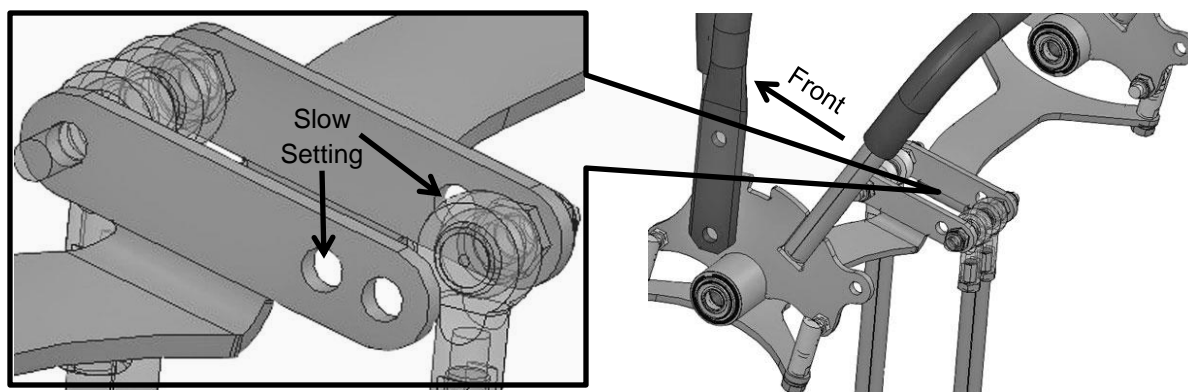

5.9 How to Perform the Tracking Adjustments



WARNING

First ensure that the tire pressure is equal on both rear drive tires. Drive the mower on a level parking lot with engine at full throttle. Check that the mower drives in a straight line when both hand controls are held to the full speed position which is up against the stationary control bar. If not, park the mower and **stop the engine**. Before proceeding to adjusting the mower tracking, check and make sure both controls move freely through the forward and reverse range. Make sure that debris has not hindered the movement of the control rods and linkages. If all control linkages move freely and mower tracking is off, proceed to the next step.

The adjustment is made by loosening the jam-nuts on the control rods (this may need to be done to one or both control rods) and adjusting the control rods. Once the jam-nuts are loosened at the top and bottom of the control rod proceed to turning the control rod clockwise or counter-clockwise. Shortening the control rod will increase the speed of the forward movement of the mower on that side. Lengthening the control rod will slow the forward movement of the mower on that side.

In the *“faster” Speed/Sensitivity setting* (this is the factory setting) neither rod should be lengthened so much that at full speed it pulls the pump control lever (on the sides of the pumps) against the internal pump stop. Therefore, to reach the maximum capable speed, the rods should be lengthened one turn at a time until you can feel, in the hand control, that the internal pump stop has been contacted. Then shorten the rod one turn (damage to the hydro pump will occur if the controls are adjusted in a way that put direct pressure on the internal pump stop). You will feel the slight resistance. There is no need to start the engine while checking this incrementally. Remember, this procedure *does not apply* if the Speed/ Sensitivity Adjustment is in the slower setting.

If the rod is made shorter it will increase the forward speed capability for that side of the mower and if the rod is made longer it will slow down that side of the mower. So, if the mower is tracking to the left, either the left side needs to go faster (by shortening the left-side rod) or the right side needs to go slower (by lengthening the right-side rod). If the mower is tracking to the right, either the right side needs to go faster (by shortening the right-side rod) or the left side needs to go slower (by lengthening the left-side rod). It is important that neither rod should be shortened too far, as mentioned above.

The only reference point to limit the adjustment from becoming extremely off is the relative position of the pump stop and the handlebar in the *faster Speed/Sensitivity setting*. Therefore, if everything is way off either because you are installing new parts (or other reasons) you should only use the *faster Speed/ Sensitivity setting* to get the tracking accurate and then change to the slower speed range and adjust the tracking only one or two turns on either side.

After getting the mower to track straight, check and/or readjust the neutral adjustment on the pump by using a 1/4” Allen wrench at the Return-to-Neutral (RTN) mechanism, if necessary. It is normal to make these adjustments from time to time.

5.10 How to Test/Use the Blade Clutch/Brake Switch




WARNING


Before testing the blade clutch/brake operation, make sure the area is clear and there is nothing vulnerable to thrown objects from under the mower. No one should be near the mower deck or in its line of discharge. The discharge chute deflector should be in the down position. The parking brake should now be applied. Move the engine throttle to 3/4 speed setting. (When mowing, the engine speed should always be at its highest setting. The engine governor will regulate the engine according to the different mowing conditions at that setting.) Place both feet firmly on the foot platform and turn on the blade clutch switch. Run blades for a minute or so. Try engaging and disengaging the blades a few times about 10 seconds apart. If the blades do not start and stop within 6-9 seconds each time, inspect the clutch or contact your local Wright dealer. Under mowing load, the clutch's life will be the greatest at the highest RPM setting.

5.11 How to Test the Operator Presence Control (OPC) Switch

The Operator Presence Switch is located behind the pump pulley guard on the right side of the tractor frame. With the parking brakes applied and the blades ON, try lifting your feet off the foot platform to test the Operator Presence Control switch (OPC). The engine should kill and the blades should stop within 6-9 seconds. If not, service the OPC system or contact your local Wright dealer.

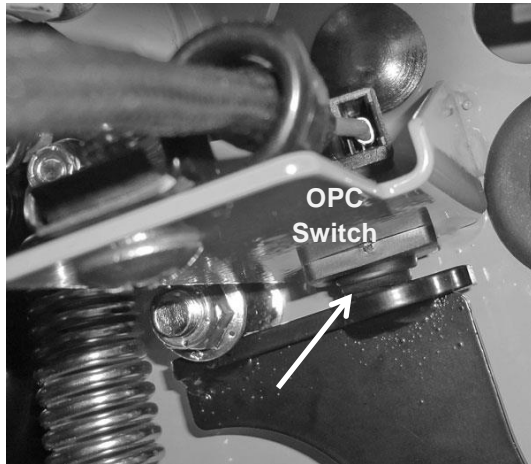

OPC – Operator Off Platform

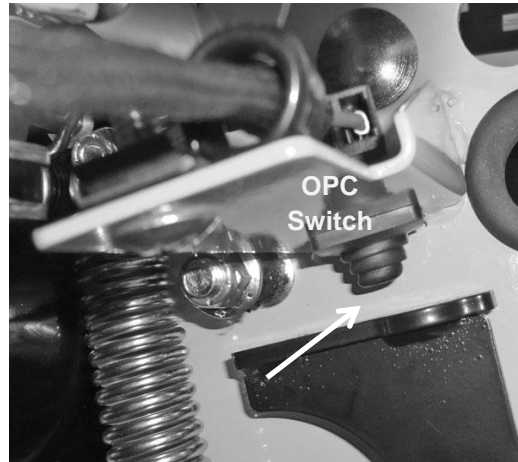

OPC – Operator On Platform

6 Service and Adjustments

For service documents go to www.wrightmfg.com, select support, then, click service docs tab.



WARNING


6.1 Tire Maintenance and Pressure

Excessively worn tire tread is dangerous on all hills. Replace drive tires with less than 3/32" of any tread groove left. Use tires with the tread pattern recommended by Wright Mfg., Inc. only. Keep the tire pressure in the drive tires between 18 and 22 psi. Higher pressures will cause the tires to have less traction, which will force you to go slower and with less safety and give you a harder ride. Front Casters are equipped with non-pneumatic tires and do not require any air. They do not have any tread but should be replaced when excessively worn. Lowering the tire pressure below the recommended pressure will change the pitch of the deck which may require further deck pitch adjustment.

6.2 Height of Cut

Before adjusting the height-of-cut be sure the mower engine is off, and rear tires have proper air pressure. Check for even tire wear. The height-of-cut can be adjusted the following way:

- Insert the selector pin on the left hand side of the mower to the desired cut height **(A)**.
- While holding the deck lift lever grip to the right of the upright, push down (with thumb) on the button at the top of the deck lift lever **(B)**. With the button pushed down, move the deck lift lever forward to lower the deck or pull back to raise the deck. When the deck is at the desired height, release the button and make sure the internal stop pin is fully locked into place **(C)**.

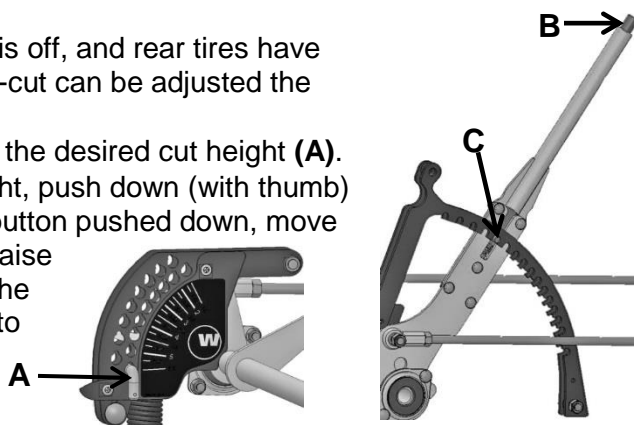

6.2.1 Deck Adjustments

The mower deck can be adjusted for pitch and side-to-side levels. Pitch is the relationship between the front of the blade and the rear of the blade in regards to height of cut. In most cases, a positive pitch (front of the blade is lower than the rear of the blade) of 1/4" is the optimum setting. The deck lift rods have been adjusted at the factory and should not need adjusting **(A)**. The adjustments can easily be made by using the threaded deck hangers **(B)** (deck pitch and side-to-side adjustments) located at the front of the deck and at the rear of the engine deck. These hangers are connected to the chains that hold the deck. If you change the deck lift rods above or below the 30.03" center-center measurement, the deck may not raise all the way up into the transport position, may change the height of cut to not match the height decal and will effect deck pitch. Be sure and check the deck height of cut range after any adjustments are made to the lift rods or deck hangers to ensure that the height of cut adjustments work properly. If unable to make the adjustments needed to align deck properly, contact your dealer for assistance.






**B - Left Rear
Deck Lift Hanger**

**B - Left Front
Deck Lift Hanger**




**B - Right Front
Deck Lift Hanger**

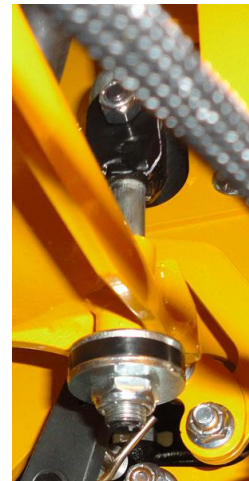

**B - Right Rear
Deck Lift Hanger**

6.3 Foot Platform

The foot platform comes equipped with 6 elastomer bumpers to give a smooth ride over various terrains. For lighter operators or for preference of feel, bumpers can be removed. It is recommended to start from the two inner bumpers.

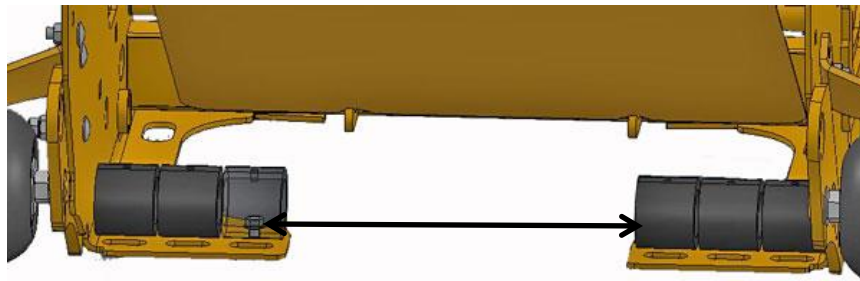


6.4 Belt Tension Adjustment

The pump drive belt is self-adjusting, and requires no adjustment, just replacement. The blade drive belts are self-adjusting also and require no adjustment, just replacement.


6.4.1 Replacing the Drive Belt

- Stop engine and remove the key and wait for all moving parts to stop.
- Remove cutter deck covers.
- Remove cutter deck engine to blade belt from clutch.
- Raise front of unit and secure
- Remove belt by using a ½" ratchet and extension to relieve belt tension.
- Reinstall in reverse order. Figure shows belt configuration.

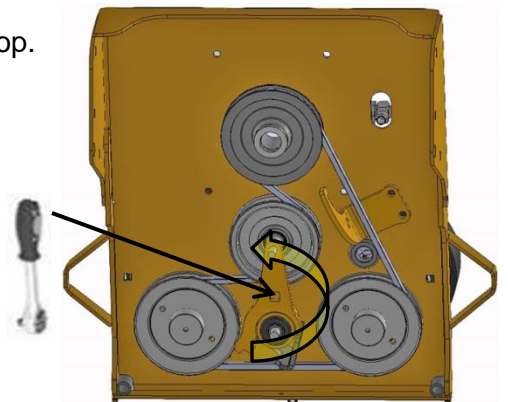


6.4.2 Replacing the Cutter Deck Belts

- Stop engine and remove the key and wait for all moving parts to stop.
- Remove deck covers
- Remove belts by using a ½" ratchet and extension to relieve belt tension.
- Reinstall in reverse order. Figure shows belt routing and spring compression direction.

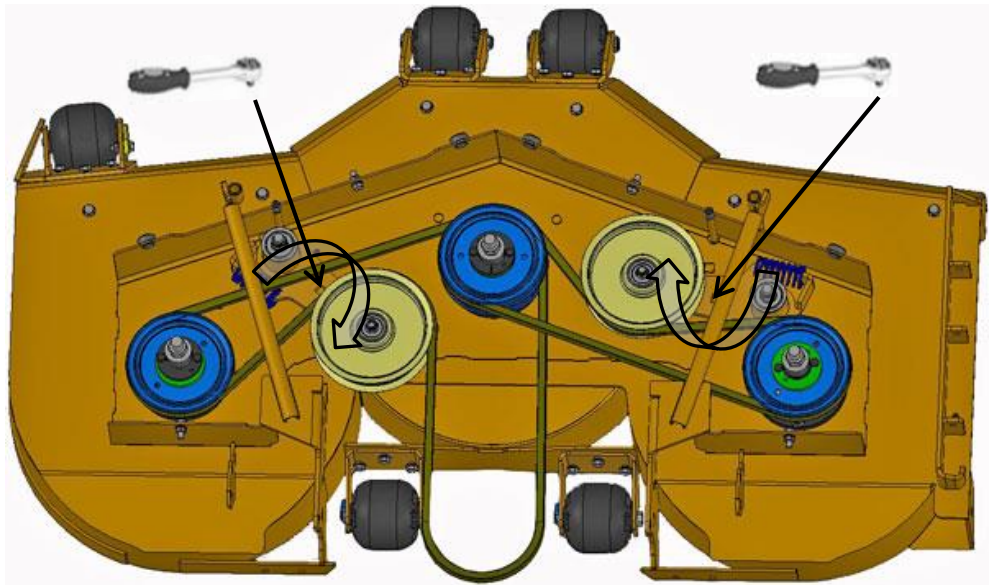

6.5 How to Move the Mower if the Engine Won't Start

Raise the upright pad, rotate both of the manual "release" valve levers on the rear of each hydraulic pump about 2-3 turns counterclockwise. It is important not to over tighten these levers. Damage may occur to the pump if this valve is over tightened.

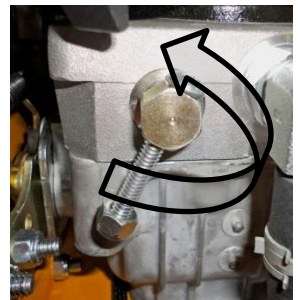


6.6 Hydraulic System



WARNING

Whenever servicing the hydraulic system, it is of the utmost importance to keep any dirt or debris from getting into the system. Clean off all parts before disassembly and assembly. When any of the hydraulic parts are disconnected or removed or when the oil is changed, air must be bled from the system. If air is entrained in the system, loss of power, excessive heat, and damage to the hydraulic pumps may occur.

- Low Pressure Hose (dashed line)
- High Pressure Hose ——— (solid line)
- Arrow indicates direction of flow →

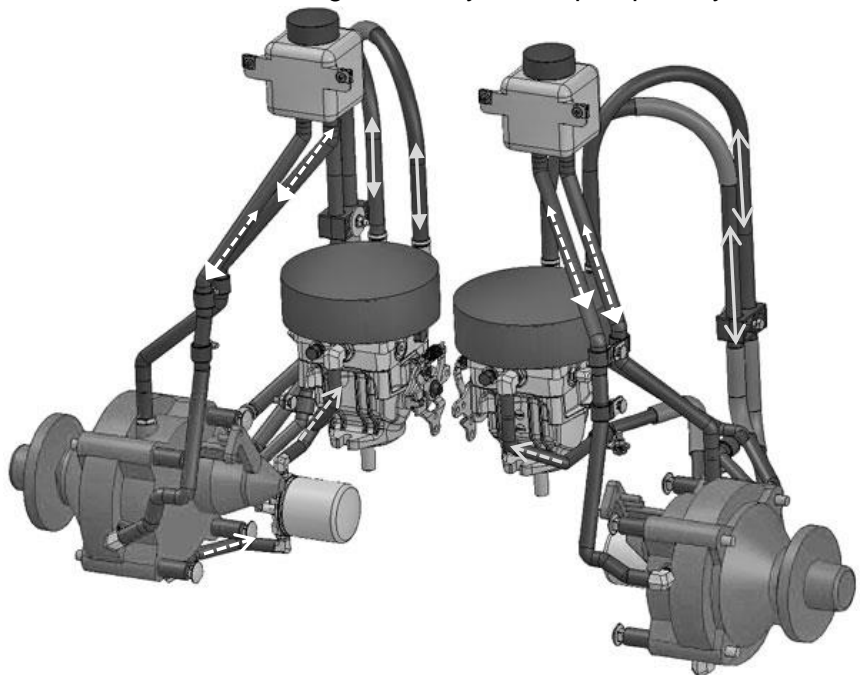


6.7 Hydraulic Oil Reservoirs Check/Fill

Checking Oil Level

1. Ensure mower is on a level surface.
2. Lift the hinged pad to access the hydro reservoirs.
3. Hydro oil should be at the "Full Cold" line.

Filling Oil Level

1. Remove the reservoir cap and fill up to the "Full Cold" line. Do not overfill.

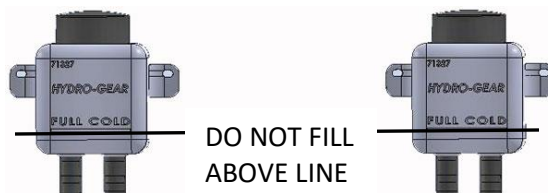

6.8 Bleeding Air from the Hydraulic System

First, make sure the oil level in the reservoirs is correct. Use fully synthetic oil: Mobil1 15W-50. Lift the mower so that the rear wheels are off the ground. Be careful to support the mower so that it will not fall or tip while the system is bled of air. With the bypass valves open and the engine running, slowly move the control levers back and forth five or six times. Now close the bypass valves and with the engine running, slowly move the control levers back and forth five or six times. It may be necessary to repeat the above steps until all the air is purged and the rear wheels are turning at normal speed. After purging is complete, adjust the oil level in the reservoir if necessary.

6.9 Battery Service

The battery is 12 volts and is a maintenance free battery. Charge the battery only if it will not start the mower effectively. Remove the battery from the mower before charging. Follow the instructions of the battery charger for proper and safe charging of the battery. Always make sure the Positive terminal is connected to the Positive battery post and the Negative terminal is connected to the Negative battery post. Reversal could cause damage to the electrical system.


1. Access battery by removing the two battery cover knobs and lift cover.
2. Keep the battery and terminals clean.
3. Keep battery bolts tight.
4. Align tabs in cover to slots in battery tray, reinstall J-bolts, knobs and tighten.



6.10 Fuel Evaporation System

All Wright Stander ZK's need to have this mandatory feature.

- Do Not alter or remove
- Do Not fill past the "Max Fill Level" line.
- Over-filling could result in clogging the roll-over vent and/or contaminating the purge canister.
- The vapor canisters are located behind the upright pad.
- Inspect and clean dust filter every 500 hrs or annually

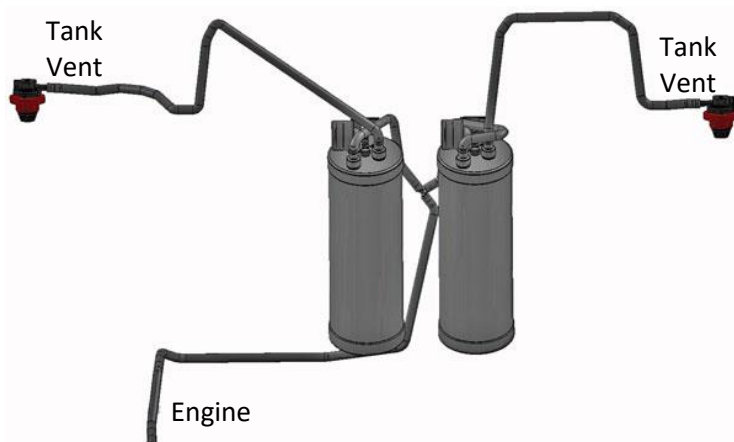

6.13 Cutting Blades



WARNING

In order to maintain the best cut, it is important that the blades are well sharpened and not damaged. Bent or cracked blades or blades with large nicks need to be replaced. Blades must be balanced after sharpening. To change the blades:

- Stop engine, remove the key and wait for all moving parts to stop.
- Engage the parking brake
- Lift front of mower and secure in the raised position with jack stands.
- Remove the blade bolt by turning counterclockwise.
- Apply anti-seize to the blade bolt.
- Install new or re-sharpened blade, start mounting bolt by hand. (Ensure the blade spacers are reinstalled with the same qty and location)
- Torque blade bolt to 70-80 ft/lbs / 95-108 Nm

6.13 Spindle Pulley Split hub R&R



WARNING

- Remove 2, 1/4" bolts from split hub and install in threaded holes in hub.
- Slowly tighten each bolt, alternating as you tighten bolts against the pulley.
- The hub will separate from the pulley.
- Replace grade 8 bolts and install in reverse order using the assembly holes to tighten hub onto pulley and spindle shaft.



6.15 Loading and Unloading



WARNING

Use extreme caution when loading and unloading units on/off trailers or trucks. One full width ramp that extends beyond the rear tires is recommended rather than individual ramps for each side of the unit. The ramp should be long enough so that the angles between the ramp and the trailer or truck does not exceed 15 degrees. A steeper angle may cause the mower deck components to get caught as the unit moves from ramp to trailer or truck. Always put the deck in the transport (up & locked) position when loading or unloading. Never attempt to turn the mower around on the ramp. Avoid sudden acceleration when driving up a ramp and sudden deceleration when backing down a ramp.

6.14 Transporting

Use a heavy duty trailer or truck to transport the Stander ZK. Lock brake and block wheels. Securely fasten the unit to the trailer or truck with straps, chains, cable or ropes.

Rear Tie Down Locations



Front Tie Down Locations



6.16 Lubrication

Grease with No. 2 general purpose lithium base or molybdenum base grease. Front caster wheels and caster arm pivots are the only locations needing lubrication.

- Set parking brake, stop the engine and remove the key.
- Clean grease fittings with a rag.
- Connect grease gun to fitting and pump until grease begins to ooze out from the bearings.
- Wipe off excess grease.
- *Do not use spray lube of any kind on choke and/or throttle cables.*
- **Service intervals:**
First 8 hours
Every 25 hours
Also see Maintenance chart



6.17 Cleaning the Mower

The underside of the mower deck should be checked and cleaned twice daily and more often if the grass being mowed is lush or wet. The entire mower should be cleaned daily at the end of the work day.

Cleaning should be done with a leaf blower or low-pressure compressed air. Wash with water only when necessary and do not use a pressure washer or nozzle as the water can enter bearings and electrical connections causing an electrical short, rust and corrosion. When washing with water, avoid spraying near the hydro cap and do so when the unit has cooled down. Washing a hot machine can cause various unseen system damage. If water is used for cleaning, immediately dry it with a leaf blower or low-pressure compressed air and run with blades engaged for approximately 10 minutes. Once the wash is complete, always lubricate and grease all applicable areas.

7 Kawasaki Engine Manual / Maintenance

It is very important that all users of this unit read and understand the Kawasaki Engine Owner's Manual. This manual contains; safety awareness, emissions, maintenance and warranty information that is critical for the care of your Kawasaki engine. Below is the periodic maintenance chart directly from the Kawasaki Owner's Manual, which is included with the sale of the Stander ZK.

○ The service intervals can be used as a guide. Service more frequently as necessary by operating conditions.


◆ : Service more frequently under dusty conditions.

K : Service to be performed by an authorized Kawasaki dealer.

MAINTENANCE	INTERVAL							
	Daily	First 8 hr.	Every 25 hr.	Every 50 hr.	Every 100 hr.	Every 200 hr.	Every 250 hr.	Every 300 hr.
Check and add engine oil.	•							
Check for loose or lost nuts and screws.	•							
Check for fuel and oil leakage.	•							
Check battery electrolyte level.	•							
◆ Check or clean air inlet screen.	•							
◆ Clean air cleaner foam element.			•					

MAINTENANCE	INTERVAL							
	Daily	First 8 hr.	Every 25 hr.	Every 50 hr.	Every 100 hr.	Every 200 hr.	Every 250 hr.	Every 300 hr.
◆ Clean air cleaner paper element.					•			
◆ Clean dust and dirt from cylinder K and cylinder head fins.					•			
Tighten nuts and screws.					•			
Change engine oil.		•			•			
Clean and regap spark plugs.					•			
Change oil filter.						•		
◆ Replace air cleaner paper element						•		
K Clean combustion chamber.								•
K Check and adjust valve clearance.								•
K Clean and lap valve seating surface.								•


8 Electrical Schematic

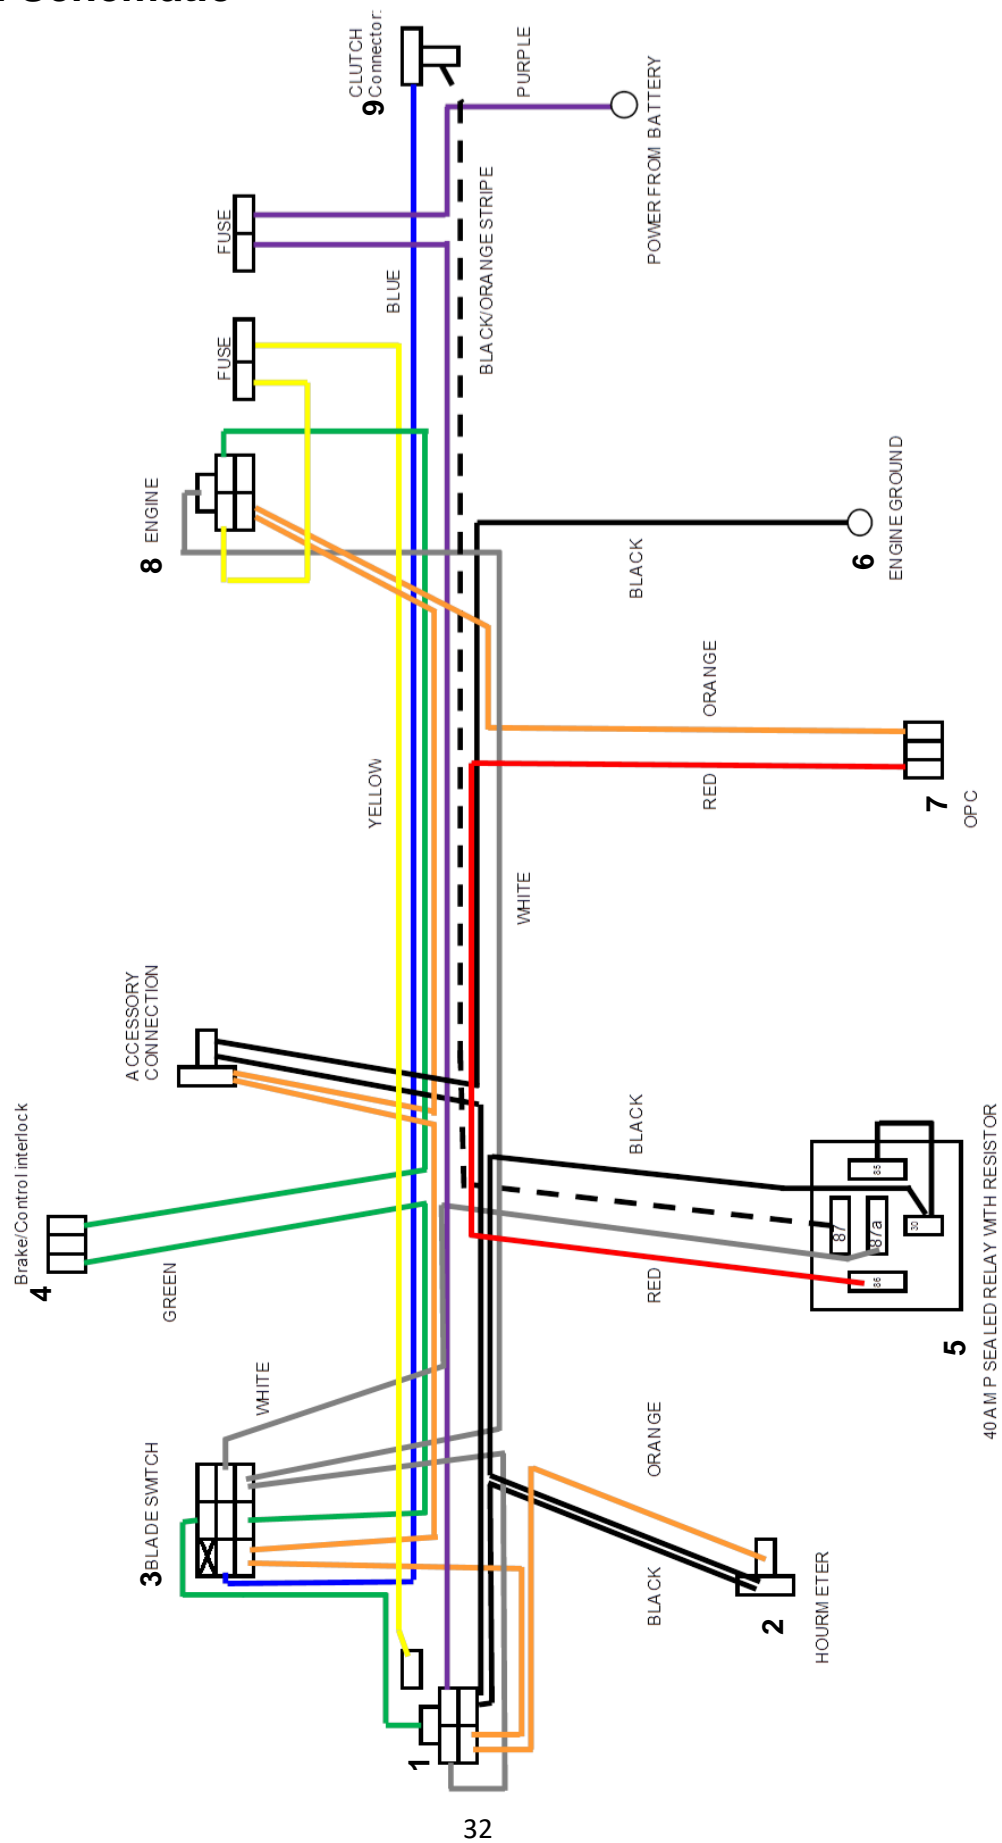



9 Decals

PN	DESCRIPTION	QTY.
76410003	DECAL, ALL LOGOS	1
76460001	DECAL, THROWN OBJECT	2
76490001	DECAL, SHIELD MISSING	3
76490005	DECAL, THROTTLE INSTRUCTIONS	1
76490007	DECAL, 52" DECK SIZE	1
76490012	DECAL, 61" DECK SIZE	1
76490013	DECAL, STANDER DASH	1
76490050	DECAL, FIRE HAZARD WARNING	2
76490059	DECAL, AMERICAN FLAG	1
76490061	DECAL, HEAVY DUTY DECK	1
76490076	DECAL, ZK STANDER FACE PLATE	1
76490082	DECAL, 2 IN TRIANGLE, ROTATING BLADES	1
76490094	DECAL, PATENT	1
76490095	DECAL, FUSION BLADE	1
76490100	DECAL, AERO-CORE DECK	2
76490154	DECAL, HYDRO GEAR BRAND	1
76490198	DECAL, HOC WSZK	1

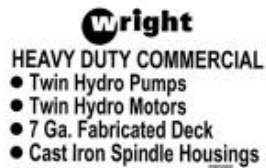

ZK Consumables / Maintenance Items	
P/N	Description
11990090	BOLT, HEX, 1/4-20X1 P8
11990117	BOLT, HEX, 1/2-20 X 4 1/2 Z5 CUSTOM
11990161	BOLT, HEX, FULL THREADED, 1/4-20X1.5 P8
12990018	NUT, NYLOCK JAM 1/2-20 Z
13990007	BLADE SPACER, 5/8 X 1/4
13990024	WASHER, NEOPRENE, 1/2 X 1 3/8 X 1/4
14990002	BUSHING, BRONZE 0.5060ID X 0.7480OD X 1L
14990007	BUSHING, 7/8ID X 1.14OD X 1
17420004	GRIP, CONTROL LEVER 0.625 X 11 X 0.090
17460004	CAP, METAL, 2IN
17460005	BUSHING, URATHANE 3/4 X 1 1/8 X 3/4
17460012	BUMPER, RUBBER, BLACK
17460017	FLEXIBLE CHUTE DEFLECTOR, RUBBER PIECE ONLY
17460018	STRIPING RUBBER, ADJUSTABLE 48/52
17460021	STRIPING RUBBER, ADJUSTABLE 61
17460023	DUST CAP, METAL, LOW PROFILE
18410012	KNOB, PLASTIC, T
34490002	HYDRO OIL FILTER, 25 MICRON, NON-BYPASS
45410027	CARBON CANISTER, 9.3 GAL, W/EARS Q-09-023
52410001	SWITCH, OPC, (GREY)
52410003	SWITCH, OPC , 2 LB INTERNAL SPRING, BLACK
52420002	THROTTLE CABLE
52420003	SWITCH, BLADE ON/OFF, RED
52460002	CHOKE CONTROL
53490019	RELAY, FOR MAIN HARNESS
71410027	CLUTCH, 1.125, OGURA, GT3.5
71440001	BLADE, 18, OPTIONAL
71440003	BLADE, 21, OPTIONAL
71440009	BLADE, OFFSET, FUSION 18, STOCK
71440012	BLADE, CE ROLLED, AIRFOIL LOW LIFT, 18, OPTIONAL
71440013	BLADE, CE ROLLED, AIRFOIL LOW LIFT, 21, OPTIONAL
71490002	BLADE, MULCHING, 18, OPTIONAL
71490003	BLADE, MULCHING, 21, OPTIONAL
71440010	BLADE, OFFSET, FUSION 21, STOCK
71460013	BELT, WRAPPED, B SECTION, 88.04 EL
71460065	BELT, WRAPPED, B SECTION, 57.04 EL
71460067	BELT, WRAPPED, B SECTION, 66.04 EL
71460136	SPINDLE ASSY, THRU BOLT
71460164	BELT, DECK, B SECTION, 100.04 EL
71460165	BELT, DRIVE, A SECTION, 58.24 EL
72490001	WHEEL, PLASTIC, ANTI-SCALP
72490002	WHEEL, PLASTIC, ANTI-SCALP, SQUARE
72490003	WHEEL, PLASTIC, SOLID
77410008	ROD END, 5/16-24
77410016	ROD END, 5/16-24 (F/F)
77410020	ROD END, M8-1.25, STUD LH/RH
96460011	DECK FRONT ANTI-SCALP, AXLE WELDMENT
98410149	PIN, HEIGHT SELECT .5 X 1.625 W LANYARD

Maintenance Interval Chart

MAINTENANCE ITEM	ENGINE ITEMS	SEE NOTE BELOW	FIRST 8 HOURS	BEFORE EACH USE	AFTER EACH USE	EVERY 25 HOURS	EVERY 50 HOURS	EVERY 100 HOURS	EVERY 200 HOURS	EVERY 300 HOURS	ANNUALLY
Check engine oil and add as needed	Engine	*1	X	X							
Check hydraulic oil reservoir levels and fill as needed (refer to Hydro Oil Tank Check & Fill section) - Use SYNTHETIC oil - Mobil1 15W-50			X	X							
Check for fuel or oil leakage - correct as needed	Engine	*1		X							
Inspect tires and check rear tire pressure, 18-22 psi			X	X							
Check brake and safety interlock system				X							
Check steering control rods and rod ends				X			X				
Inspect all belts for wear and alignment			X	X			X				
Check all bolts, nuts other hardware (e-clips, snap rings, rod ends) for tightness (tighten as necessary)			X	X							
Check all safety covers and shields				X							
Clean air cleaner Primary Element	Engine	*1		X							
Clean air cleaner Secondary Element	Engine	*1		X							
Clean engine blower screen and fins with compressed air	Engine	*1			X						
Grease front caster wheels and caster pivot arms (refer to Lubrication section)			X				X				X
Clean battery terminals							X				
Clean mower with compressed air-do NOT use a pressure washer					X						
Check blades for wear and sharpness (sharpen and balance or replace as necessary)					X						
Clean out debris under blade belt cover					X						
Scrape clean underside of cutter deck					X						
Check blade mounting bolts for proper tightness					X		X				
Check blade spindle mounting bolts for proper tightness					X						
Remove engine cooling shroud and remove debris	Engine	*1						X			X
Check all hoses, clamp and fittings			X						X		X
Replace fuel filter	Engine	*1	X								
Change engine oil and filter	Engine	*1	X					X			
Clean and re-gap spark plug (replace as necessary)	Engine	*1						X			X
Check and adjust valve clearance	Engine	*1								X	

Maintenance Record

[illegible]

WRIGHT MANUFACTURING, INC. POWER EQUIPMENT LIMITED WARRANTY

THIS WARRANTY SUPERSEDES ALL PREVIOUS ON UNITS WITH A RETAIL SALES DATE ON OR AFTER 04/01/05

Wright Manufacturing, Inc. (hereinafter: WMI) warrants to the original owner that the new WMI mower accompanying this document will be free from manufacturing defects in materials or workmanship subject to the following limitations and exclusions. Any part of the WMI commercial mower manufactured by WMI and found, in the reasonable judgment of WMI, to be defective in materials or workmanship, will be repaired or replaced by an Authorized WMI Service Dealer without charge for parts and (except as excluded below) labor. This Warranty is limited to the original Owner and the mower this document was provided with and is not transferable. Dealer demo units with less than fifty hours when first retailed shall also be covered by this limited warranty. Proofs of Purchase, Authorized Dealer performed Pre-Deliver Service and the First Eight Hour Service will be required by the Authorized WMI Service Dealer to substantiate any warranty claims. All WMI warranty work must be performed by an Authorized WMI Service Dealer and item must be delivered to the dealer prior to the expiration of the warranty period. This Warranty is limited to the following specified periods from the date of the original retail purchase for defects in materials or workmanship and will commence upon the date of original retail purchase. This warranty shall apply only if the warranty registration form has been completed and returned to Wright Manufacturing, Inc. within 14 days from the date of original retail purchase. This warranty includes only the cost of parts and labor (when applicable). This warranty applies only to the replacement of defective or otherwise warrantable WMI OEM parts being replaced with WMI OEM parts.

- All parts and components (except as noted below) – 2 years
- Belts – 90 days
- Battery – 90 days
- Engine – warranty covered by engine manufacturer and handled through the respective Authorized engine Dealers

Exclusions:

Any damage or deterioration due to normal use, wear and tear or exposure
All filters, engine oil, hydraulic oil, tires and tubes
Bent, fractured or broken parts occurring through impact or hard use
Clutch: linings, anti-rotation failure or other failure due to improper replacement installation
Cost of regular maintenance service, parts or adjustments
Worn bearings (other than spindle bearings; see above)
Worn bushings, cotters, clips, pins and retainers
Grease fittings/zerts
Paint, paint fading, cosmetic imperfections and steel surface imperfections
Fabric, cushion and rubber grip wear or damage
Cutting blades, light bulbs, fuses
Damage due to loose pulleys on shafts
Damage due to loose wheel hubs on tapered hydraulic motor shafts
Fire Damage
Abrasion or corrosion wear or damage

Repair Parts Replaced During Original Warranty

All Repair parts (excluding wear or otherwise excluded items) installed during the warranty period are warranted until the end of the respective original period according to the categories above except in the case that the respective original warranty period expires in less than ninety (90) days after the installation of the part(s). If this happens then the parts are warranted for a total of ninety (90) days from the time of their installation.

Rental Use

The above warranty periods are limited to maximum of ninety (90) days for mowers that are used for rental purposes.

The WMI mower, including any defective part, must be returned to an Authorized WMI Service Dealer within the warranty period. The expense of lost production time and delivering the mower to the Authorized WMI Service Dealer for warranty work and the expense of returning it to the Owner after repair will be paid for by the Owner. WMI's responsibility is limited to making the required repairs and no claim of breach of warranty shall be cause for cancellation or rescission of the contract of sale of any WMI mower. This Warranty does not apply to any mower that was delivered to an Owner prior to the Pre-Delivery Service as specified in the Owner's Manual. This Warranty does not apply to any mower that was shipped in a crate to the Owner or delivered to the Owner by non-employees of an Authorized Dealer. For the Owner's protection and a valid Warranty, please note: WMI does not permit Authorized Dealers to make non-face-to-face deliveries of the mower and any who are found doing so are subject to immediate cancellation as Authorized Dealers. This Warranty does not cover any mower that has been subject to misuse, neglect, negligence, burning in any fire, an accident, or that has been operated or maintained in any way contrary to the operating and maintenance instructions as specified in the Owner's Manual. The Warranty does not apply to any damage to the mower that is the result of improper maintenance or to any mower or parts that have not been assembled or installed as specified in the Owner's Manual. The Warranty does not cover any mower that has been altered or modified changing performance or durability. In addition, the Warranty does not extend to repairs made necessary by normal wear, or by the use of parts or accessories which, in the reasonable judgment of WMI, are either incompatible with the WMI mower or adversely affect its operation, performance or durability.

WMI reserves the right to change or improve the design of any mower without assuming any obligation to modify any mower previously manufactured.

All other implied warranties are limited in duration to the two (2) year warranty period or ninety (90) days for mowers used for rental purposes. Accordingly, any such implied warranties including merchantability, fitness for a particular purpose, or otherwise, are disclaimed in their entirety after the expiration for the appropriate two (2) year or ninety (90) day warranty period. WMI's obligation under this Warranty is strictly limited to the repair or replacement of defective parts and WMI does not assume, or authorize anyone to assume for them, any other obligation. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply.

WMI assumes no responsibility for incidental, consequential or other damages including, but not limited to, expense for gasoline, expense of delivering the mower to an Authorized WMI Service Dealer and expense of returning it to the Owner, damage by fire, mechanic's travel time, telephone charges, rental of a like product during the time warranty repairs are being performed, travel, loss or damage to personal property, loss of revenue, loss of use of the power equipment, loss of time or inconvenience. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply.

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

This Warranty applies to all WMI mowers sold in the United States of America and Canada.

For the location of the Authorized WMI Service Dealer nearest you or other information, such as, Parts Lists and Owner's Manuals visit our website at: www.wrightmfg.com

Wright Manufacturing, Inc.
4600-X Wedgewood Blvd.
Frederick, Md 21703

FEDERAL AND CALIFORNIA EMISSION CONTROL WARRANTY STATEMENT

YOUR WARRANTY RIGHTS AND OBLIGATIONS

The United States Environmental Protection Agency (EPA), California Air Resources Board (CARB) and Wright Manufacturing, Inc. (WMI) are pleased to explain the evaporative emission control system (EECS) warranty on your 2014 - 2015 commercial mower. In the United States, new equipment that use small off-road engines must be designed, built and equipped to meet the Federal's stringent evaporative emissions standards. In California, new equipment that use small off-road engines must be designed, built and equipped to meet the State's stringent anti-smog standards. WMI must warrant the EECS on your commercial mower for the period of time listed below provided there has been no abuse, neglect or improper maintenance of your equipment.

Your EECS may include parts such as the carburetor, fuel-injection system, the ignition system, catalytic converter, fuel tanks, fuel lines, fuel caps, valves, canisters, filters, vapor hoses, clamps, connectors, and other associated emission-related components.

Where a warrantable condition exists, WMI will repair your commercial mower at no cost to you including diagnosis, parts and labor.

MANUFACTURER'S WARRANTY COVERAGE:

This evaporative emission control system is warranted for two years. If any evaporative emission-related part on your equipment is defective, the part will be repaired or replaced by WMI.

OWNER'S WARRANTY RESPONSIBILITIES:

- As the commercial mower owner, you are responsible for performance of the required maintenance listed in your owner's manual. WMI recommends that you retain all receipts covering maintenance on your commercial mower but WMI cannot deny warranty solely for the lack of receipts.
- As the commercial mower owner, you should however be aware that WMI may deny you warranty coverage if your commercial mower or a part has failed due to abuse, neglect, or improper maintenance or unapproved modifications.

You are responsible for presenting your commercial mower to WMI's distribution center or service center as soon as the problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days. If you have a question regarding your warranty coverage, you should contact WMI's warranty claims department at (301) 360-9810.

GENERAL EMISSIONS WARRANTY COVERAGE:

WMI warrants to the ultimate purchaser and each subsequent purchaser that the commercial mower is:

Designed, built and equipped so as to conform with all applicable regulations; and

Free from defects in materials and workmanship that cause the failure of a warranted part to be identical in all material respects to that part as described in WMI's application for certification.

The warranty period begins on the date the commercial mower is delivered to an ultimate purchaser or first placed into service. The warranty period is two years.

Subject to certain conditions and exclusions as stated below, the warranty on emission-related parts is as follows:

(1) Any warranted part that is not scheduled for replacement as required maintenance in the written instructions supplied, is warranted for the warranty period stated above. If the part fails during the period of warranty coverage, the part will be repaired or replaced by WMI according to subsection (4) below. Any such part repaired or replaced under warranty will be warranted for the remainder of the period.





- (2) Any warranted part that is scheduled only for regular inspection in the written instructions supplied is warranted for the warranty period stated above. Any such part repaired or replaced under warranty will be warranted for the remaining warranty period.
- (3) Any warranted part that is scheduled for replacement as required maintenance in the written instructions supplied is warranted for the period of time before the first scheduled replacement date for that part. If the part fails before the first scheduled replacement, the part will be repaired or replaced by WMI according to subsection (4) below. Any such part repaired or replaced under warranty will be warranted for the remainder of the period prior to the first scheduled replacement point for the part.
- (4) Repair or replacement of any warranted part under the warranty provisions herein must be performed at a warranty station at no charge to the owner.
- (5) Notwithstanding the provisions herein, warranty services or repairs will be provided at all of our distribution centers that are franchised to service the subject engines or equipment.
- (6) The commercial mower owner will not be charged for diagnostic labor that is directly associated with diagnosis of a defective, emission-related warranted part, provided that such diagnostic work is performed at a warranty station.
- (7) WMI is liable for damages to other engine or equipment components proximately caused by a failure under warranty of any warranted part.
- (8) Throughout the commercial mower warranty period stated above, WMI will maintain a supply of warranted parts sufficient to meet the expected demand for such parts.
- (9) Any replacement part may be used in the performance of any warranty maintenance or repairs and must be provided without charge to the owner. Such use will not reduce the warranty obligations of WMI.
- (10) Add-on or modified parts that are not exempted by the Air Resources Board may not be used. The use of any non-exempted add-on or modified parts by the ultimate purchaser will be grounds for disallowing a warranty claims. WMI will not be liable to warrant failures of warranted parts caused by the use of a non-exempted add-on or modified part.

WARRANTED PARTS:

The following emission warranty parts listed below are covered:

- (1) Fuel Tank
- (2) Fuel Cap
- (3) Fuel Line
- (4) Fuel Line Fittings
- (5) Clamps
- (6) Pressure Relief Valves
- (7) Control Valves
- (8) Control Solenoids
- (9) Electronic Controls
- (10) Vacuum Control Diaphragms
- (11) Control Cables
- (12) Control Linkages
- (13) Purge Valves
- (14) Vapor Hoses
- (15) Liquid/Vapor Separator
- (16) Carbon Canister
- (17) Canister Mounting Brackets
- (18) Carburetor Purge Port Connector

Cut Quality and Mowing Tips

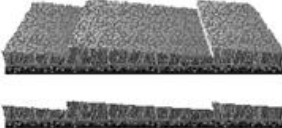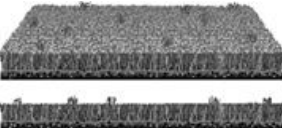Problem	Description	Possible Cause	Solution
Streaking	<p>Streaking is when strips of uncut grass are left behind.</p> 	Blades are not sharp	Sharpen blades
		Blades are worn down too far	Replace blades
		Engine RPM is too low	Mow at full throttle
		GROUND SPEED IS TOO FAST	SLOW DOWN
		Deck is plugged with grass	Clean deck
Stepped Cutting	<p>Stepped cutting is sharp ridges left in the lawn surface. Stepped cutting is usually caused by deck damage or misadjustment, or blade damage</p> 	Deck is not leveled correctly	Level the deck
		Tires are not properly installed/inflated	Check and inflate tires
		Blades are damaged	Replace blades
		Deck shell is damaged	Repair or replace deck
		Spindle is bent or loose	Repair or replace spindle
Scalping	<p>Scalping is when the deck comes close to or hits the ground. Scalping can be caused by the deck is misadjusted, unevenness in the lawn, or by deck bounce because ground</p> 	Lawn is uneven or bumpy	Roll or level the lawn
		Deck cutting height is set too low	Raise cutting height
		Deck is not leveled correctly	Level the deck
		Tire pressure is uneven	Check and inflate tires
Stringers	<p>Stringers are sparse patches of uncut grass left behind the mower.</p> 	Blades are not sharp or are nicked	Sharpen blades
		Blades are worn down too far	Replace blades
		Engine RPM is too low	Mow at full throttle
		GROUND SPEED IS TOO FAST	SLOW DOWN
		Deck is plugged with grass	Clean deck

Recommended Mowing Heights		
Grass	Minimum Height	Maximum Height
Tall Fescue	1 1/2"	3"
Kentucky Bluegrass	1 1/2"	2 1/2"
Bahia Grass	2"	3"
Bermuda Grass	1/2"	1"
St. Augustine Grass	1"	3"
Zoysia Grass	1/2"	1"
Mowing Tips		
Always mow at full throttle		
Check deck pitch, front blade tip MUST be 1/4" - 3/8" lower than the back of the blade tip.		
Cut 1/3 of the grass blade, cutting more is not recommended unless grass is sparse		
Use a slower ground speed when grass is wet and lush or when using a mulch kit.		
Clean the under side of the cutter deck after each use. Grass build up WILL eventually effect cut quality.		

NOTES:

NOTES:



4600X Wedgewood Blvd
Frederick, MD 21703
www.wrightmfg.com