




Wright Part's Counter Assembly Instructions



FRONT VIEW



REAR VIEW

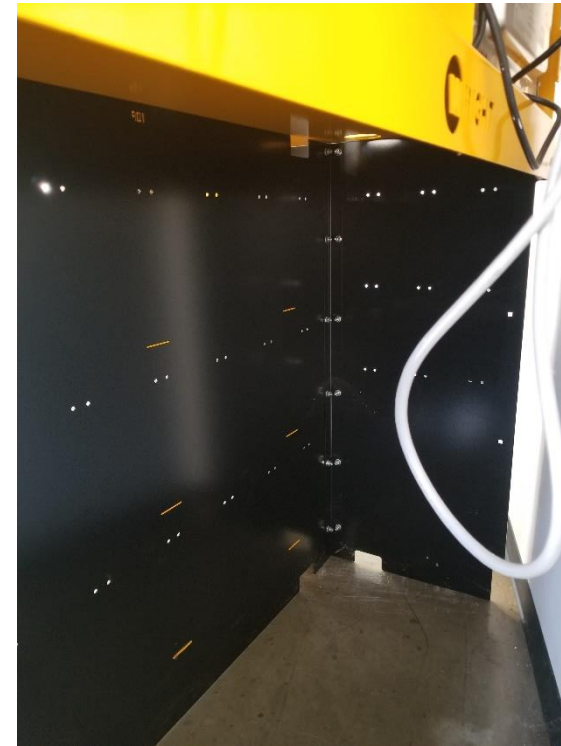

2ND

91490033

3RD ON THE BACK SIDE OF 1ST PIECE

17420001

1ST

91490033

LAST

93490036

5TH ON THE BACK SIDE OF 1ST PIECE

91490034

91490035

4TH

91490033


11990059

6TH AFTER PUTTING ON THE SIDES

93490037

12990007

PN	DESCRIPTION	QTY.
11990059	BOLT, CARRIAGE 5/16-18 X 3/4 Z5	26
12990007	NUT, FLANGE 5/16-18 Z5	26
17420001	PLUG, PANEL, BLACK, 3IN	1
91490033	PARTS COUNTER SIDE	1
91490033	PARTS COUNTER SIDE	1
91490034	COUNTER FACE, 48"	1
91490035	COUNTER INSIDE CORNER SUPPORT	2
93490036	COUNTER TOP, 48"	1
93490037	COUNTER SHELF, 48"	3

The Information contained in this drawing is the sole property of Wright MFG ., INC. Any Reproduction in part or whole without the written permission of Wright MFG ., INC is prohibited